
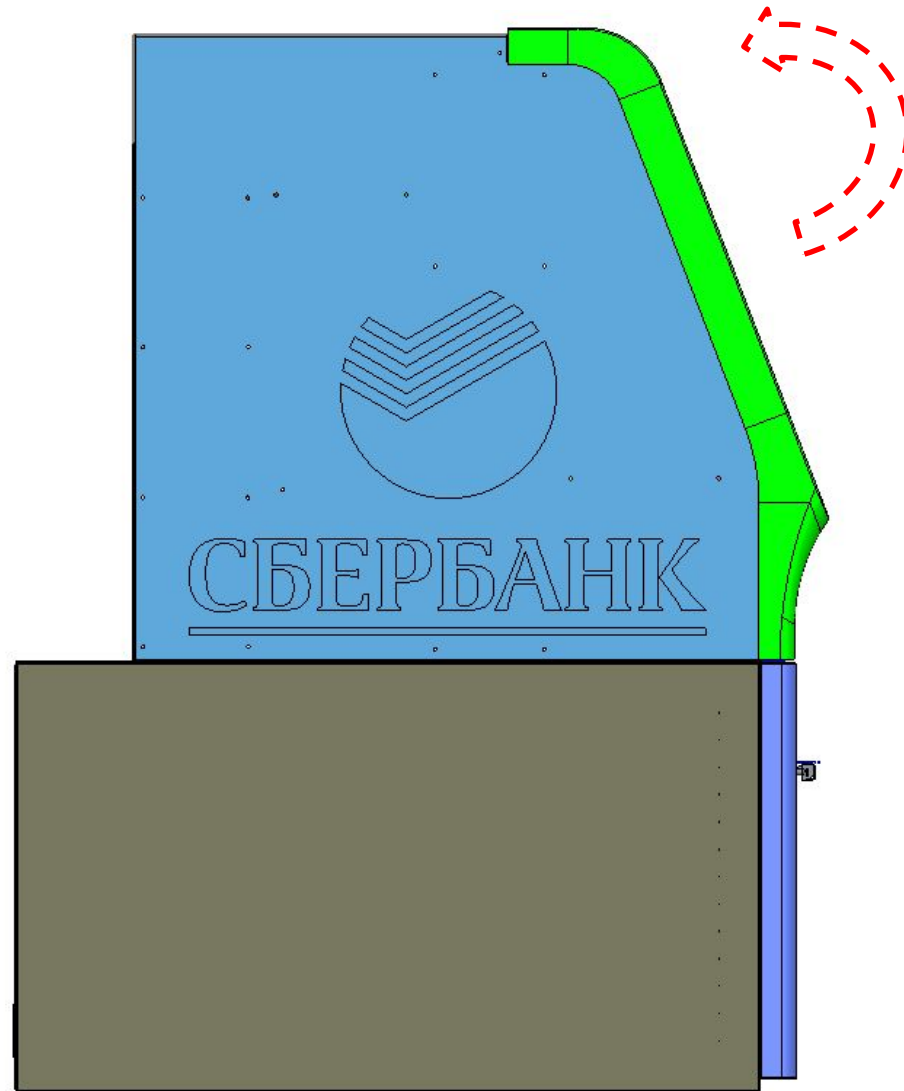


<MX8600-CENL>
HEATER INSTALLATION MANUAL






2018. 02. 12
R&D CENTER

1. UPPER-BODY HEATER INSTALLATION

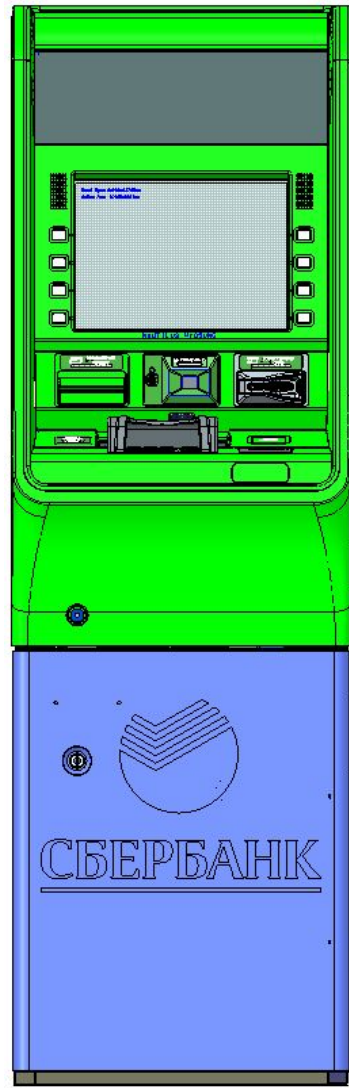


1. OPEN THE FRONT PANEL

1-1. UPPER-BODY HEATER INSTALLATION

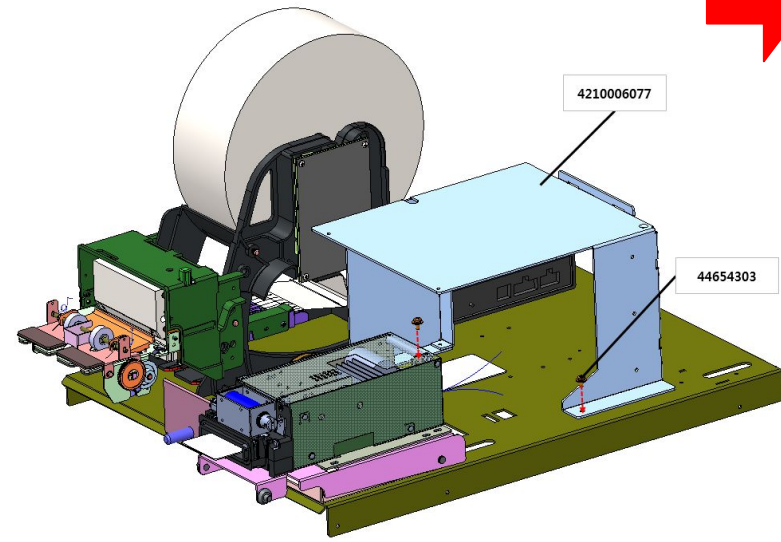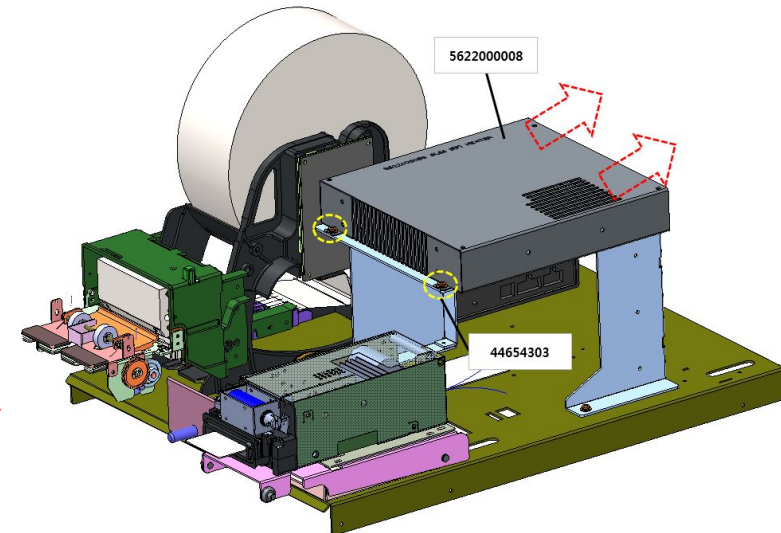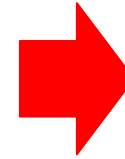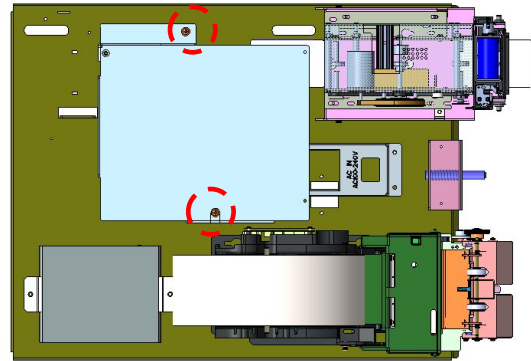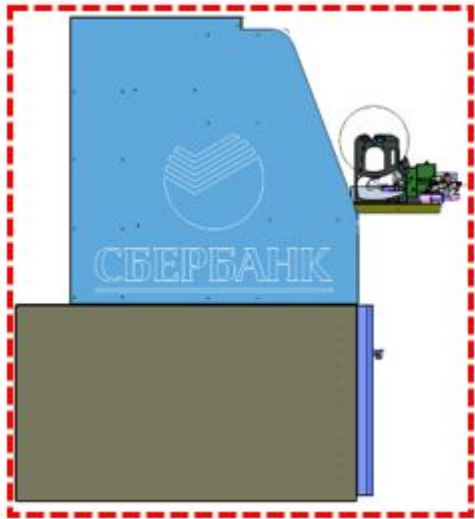


< CABLING >

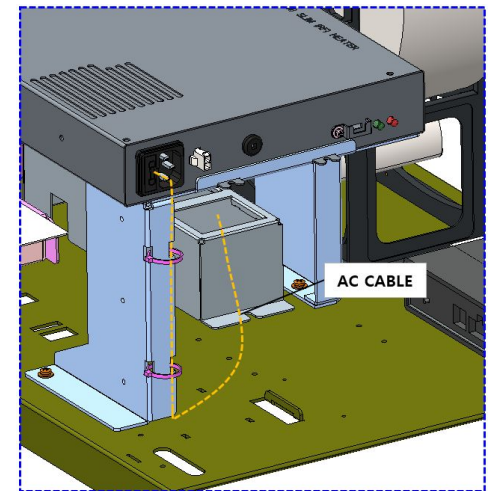


1. PULL OUT SHU-BASE.
2. ASSEMBLE SUPPORT BRKT (P/N 4210006077) AND HEATER (P/N562200008) AS ABOVE.

2. SAFETY-BODY HEATER INSTALLATION

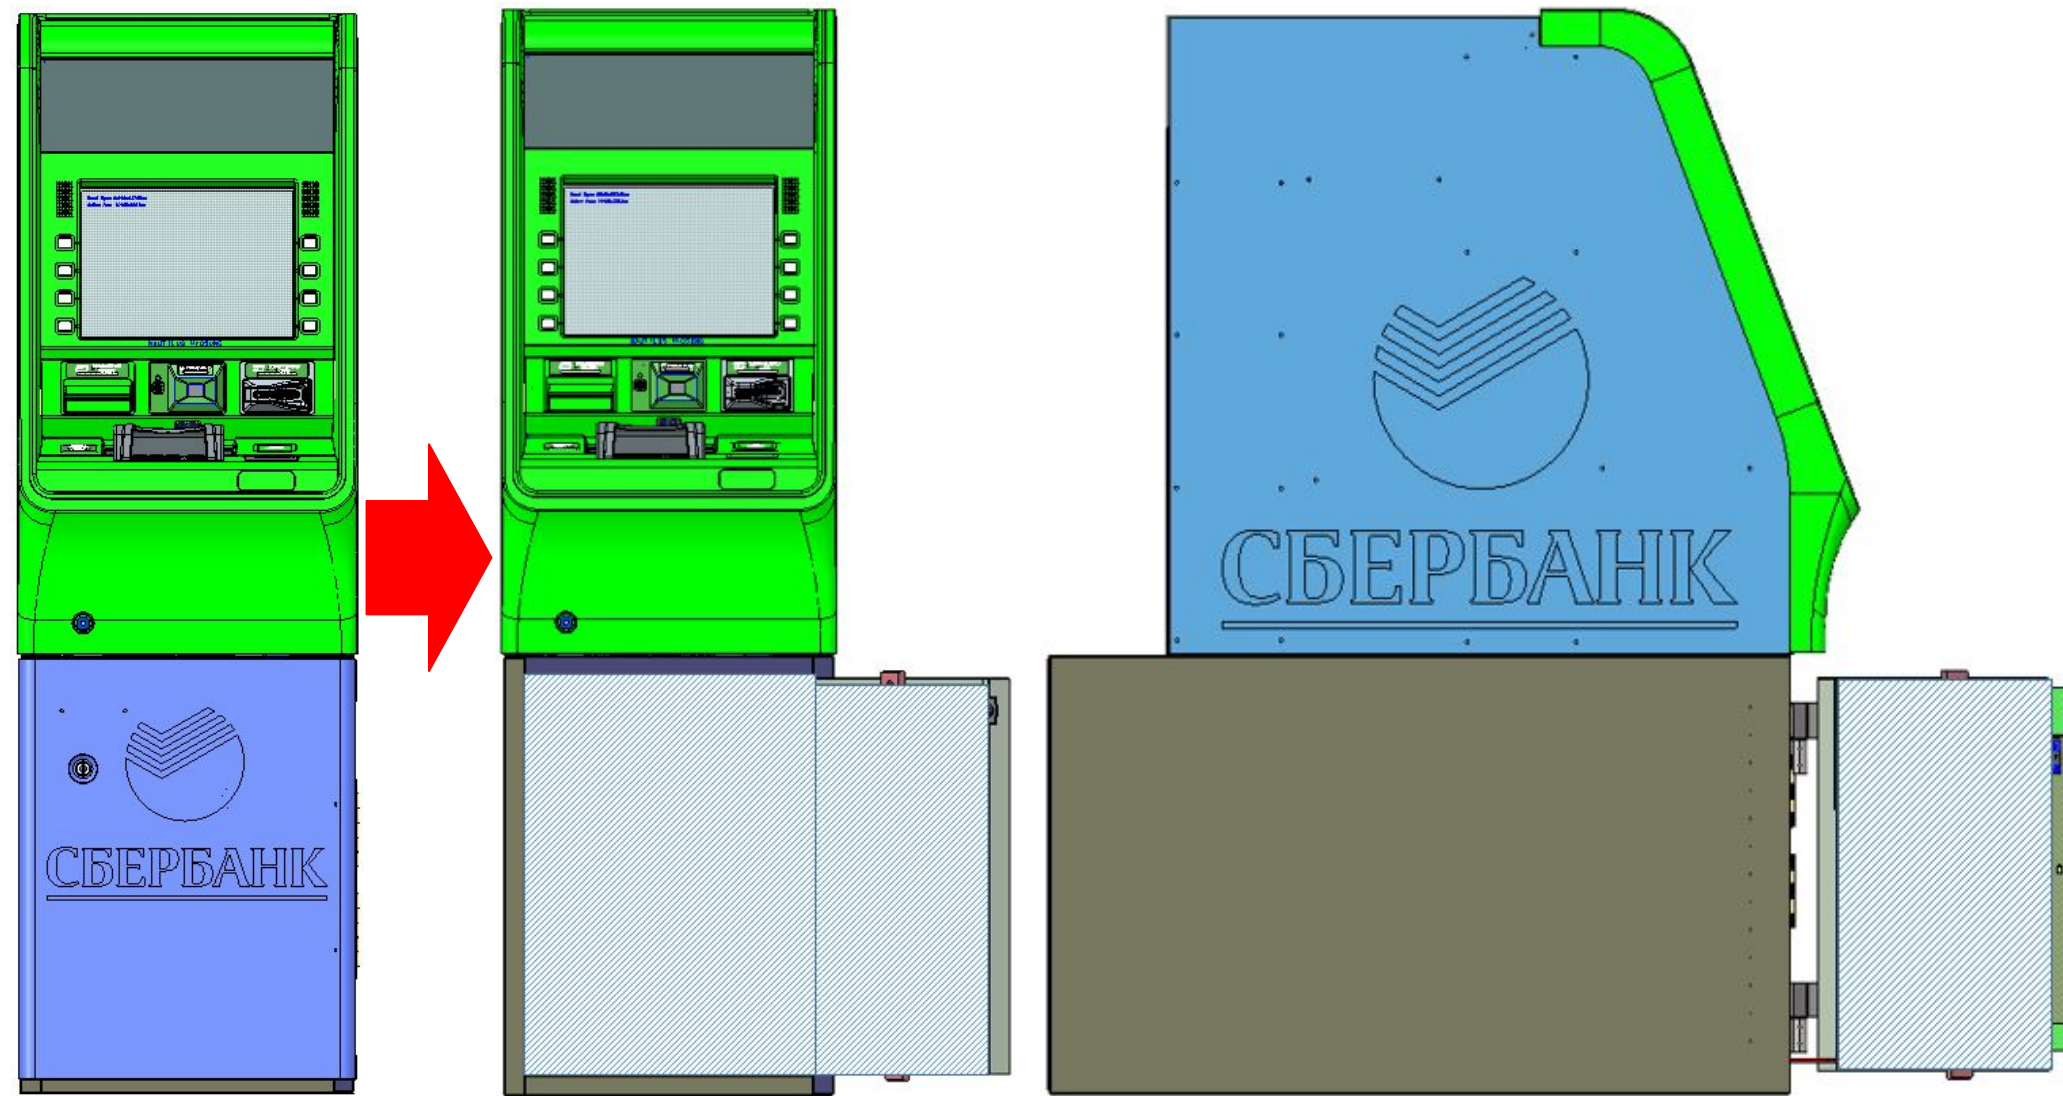

1. OPEN THE OUT DOOR AND SAFETY DOOR.

2-1. SAFETY-BODY HEATER INSTALLATION

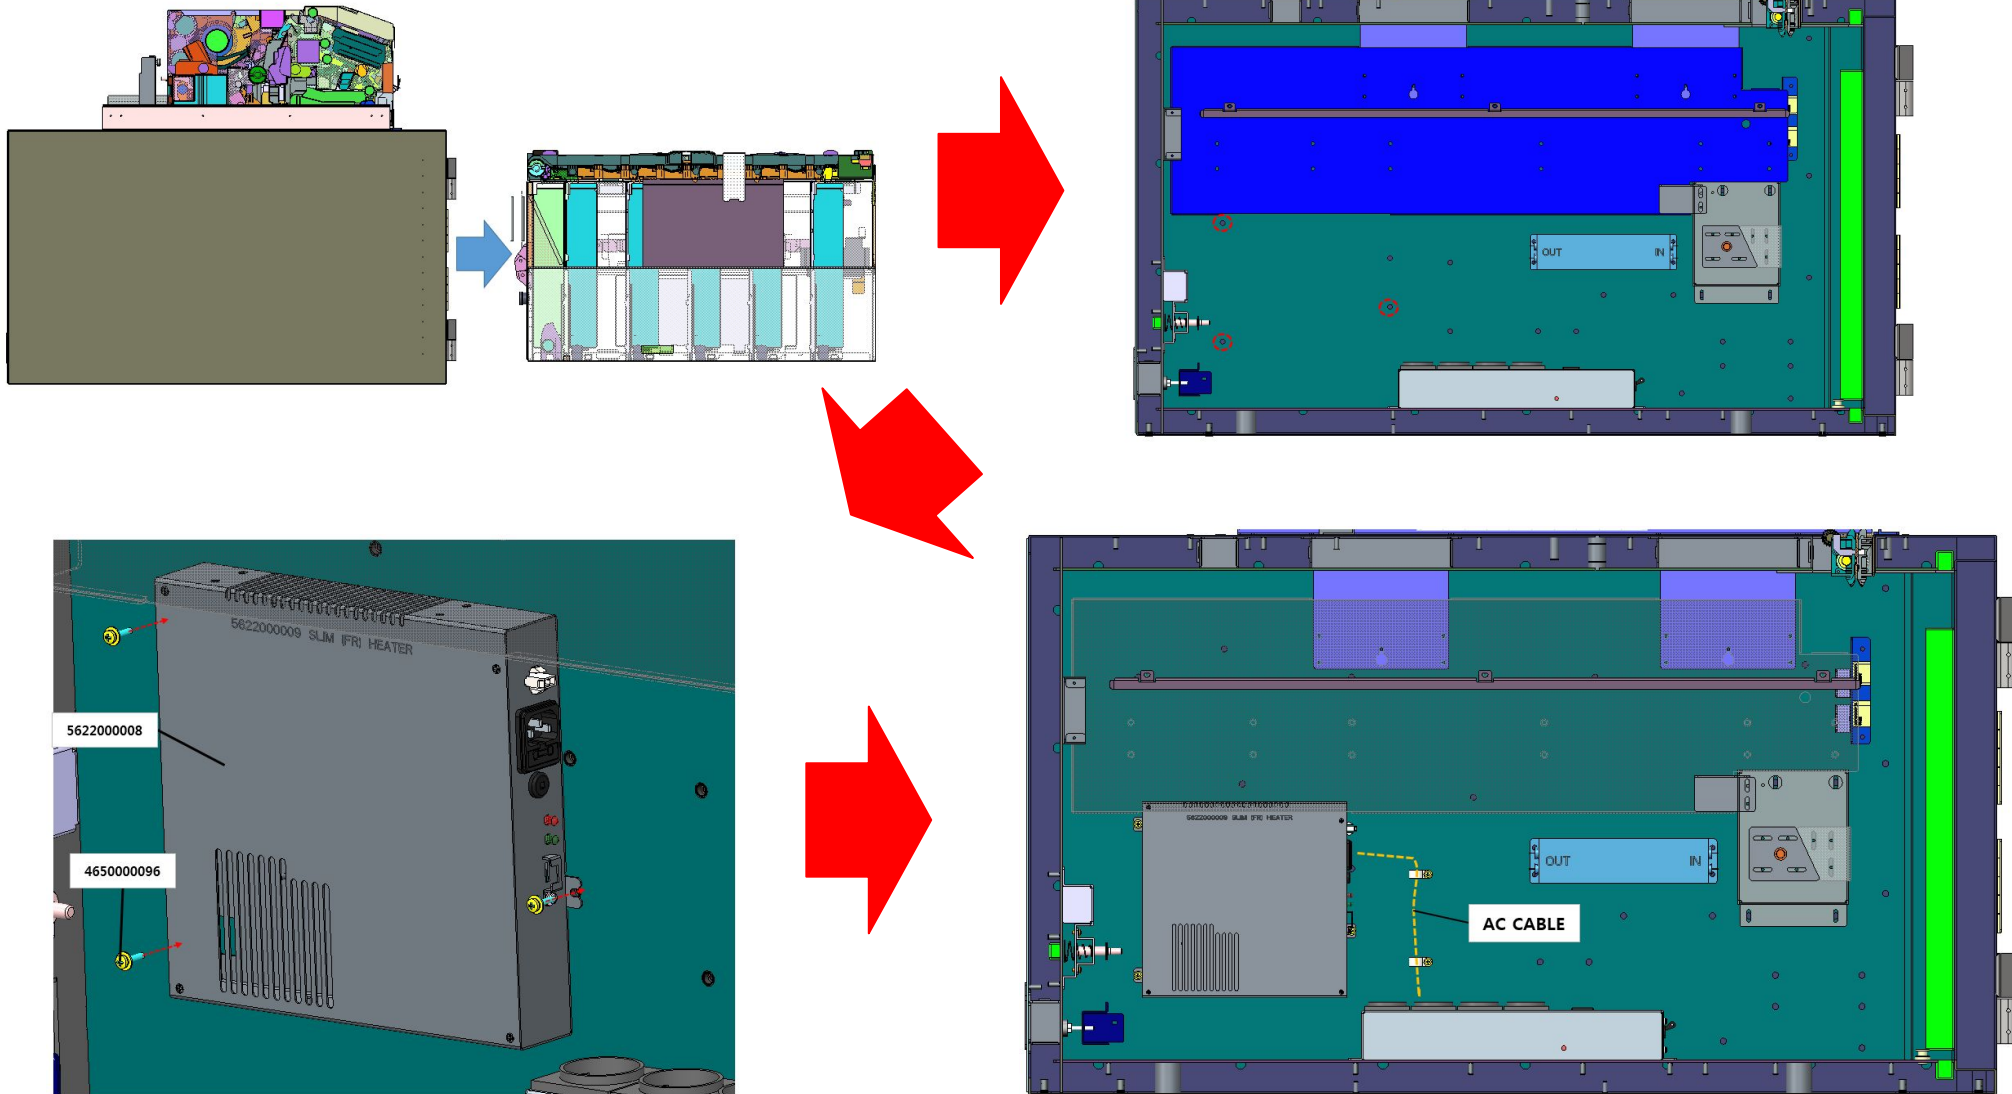

1. PULL OUT AND DISASSEMBLE BMD ASSY (SEE ABOVE PICTURE) FROM BMU MODULE.
2. ASSEMBLE HEATER (P/N562200009) ON BMD ASSY (SEE ABOVE PICTURE).