
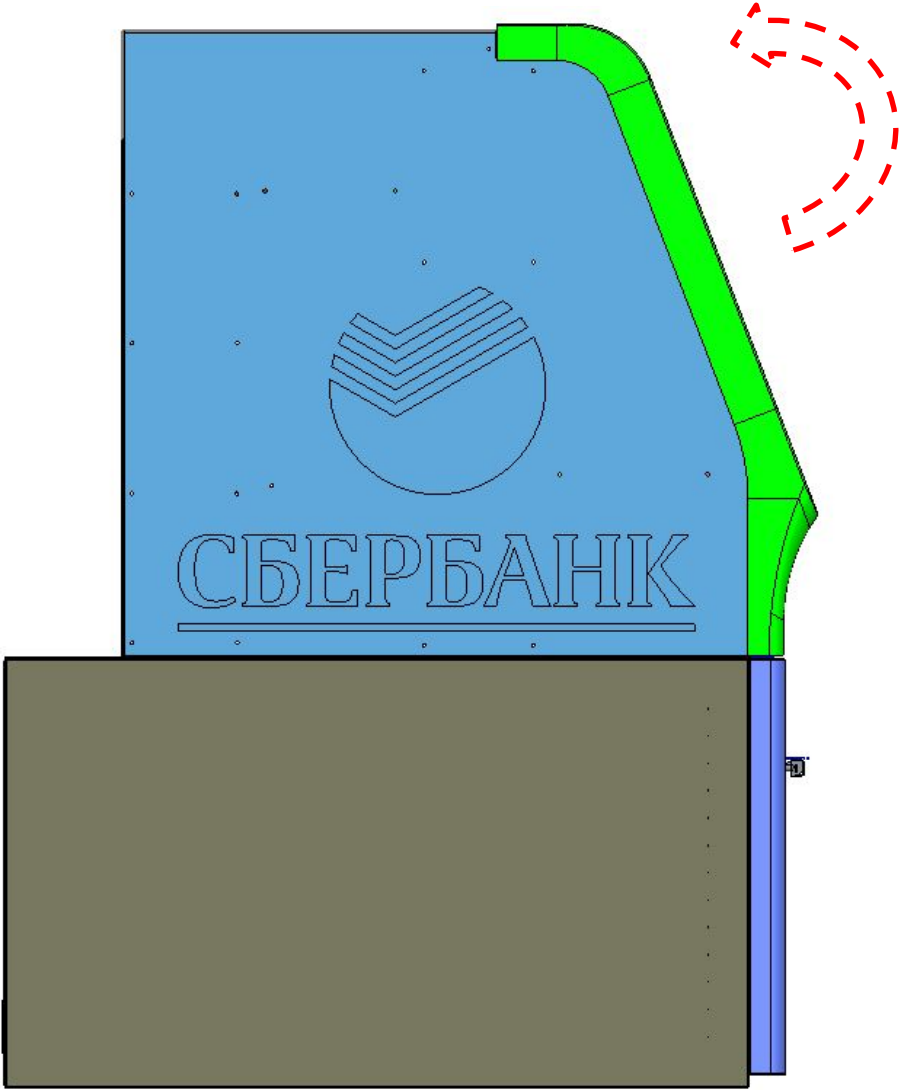


<MX8600-CENL>  
HEATER INSTALLATION MANUAL

---






2018. 02. 12  
R&D CENTER

# 1. UPPER-BODY HEATER INSTALLATION

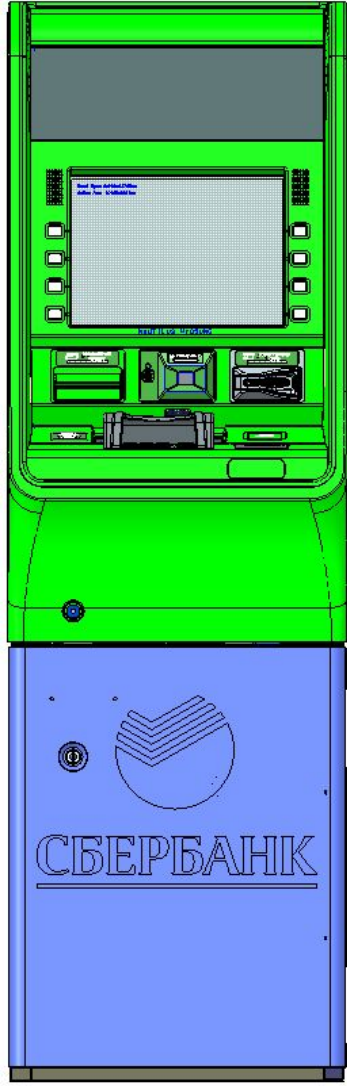


1. OPEN THE FRONT PANEL

# 1-1. UPPER-BODY HEATER INSTALLATION

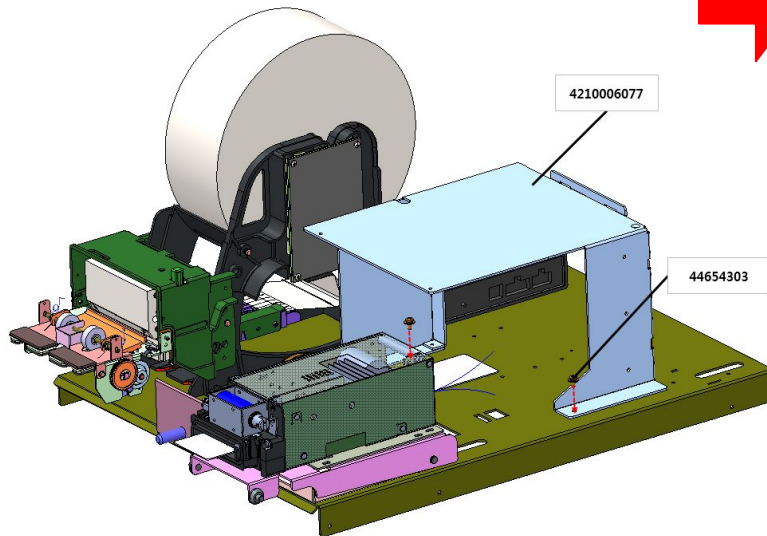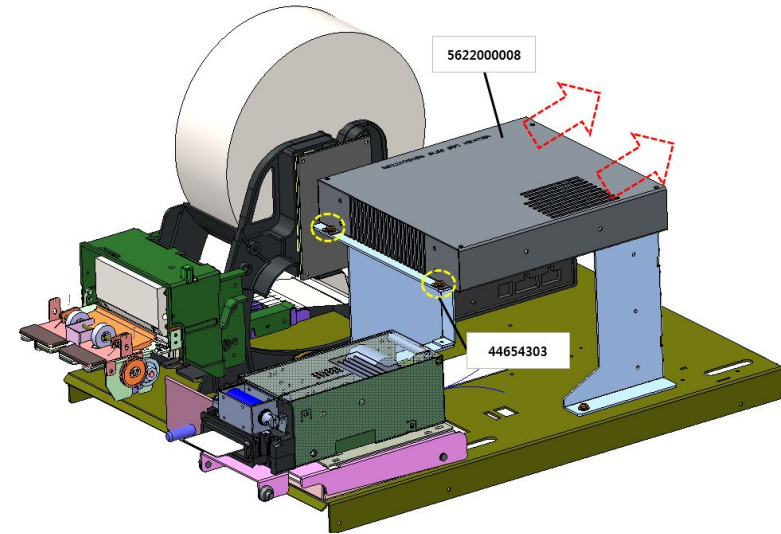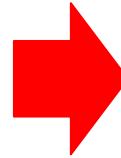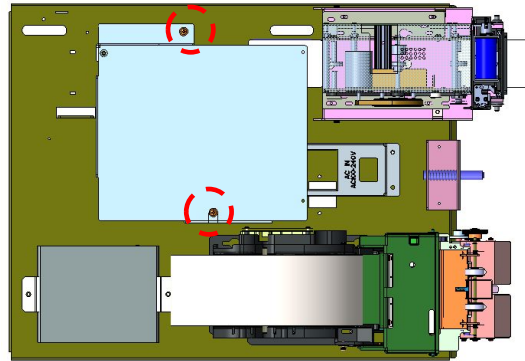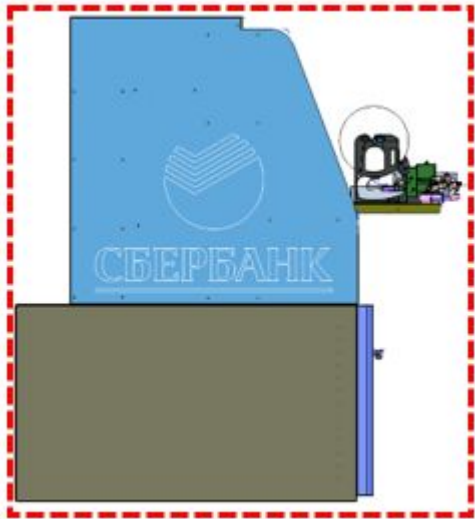


<CABLING>

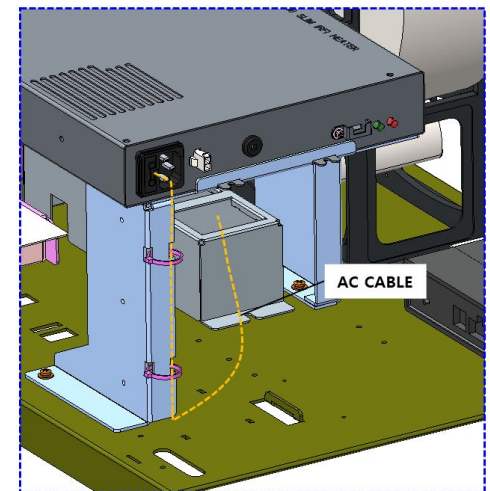

1. PULL OUT SHU-BASE.
2. ASSEMBLE SUPPORT BRKT (P/N 4210006077) AND HEATER (P/N562200008) AS ABOVE.


## 2. SAFETY-BODY HEATER INSTALLATION

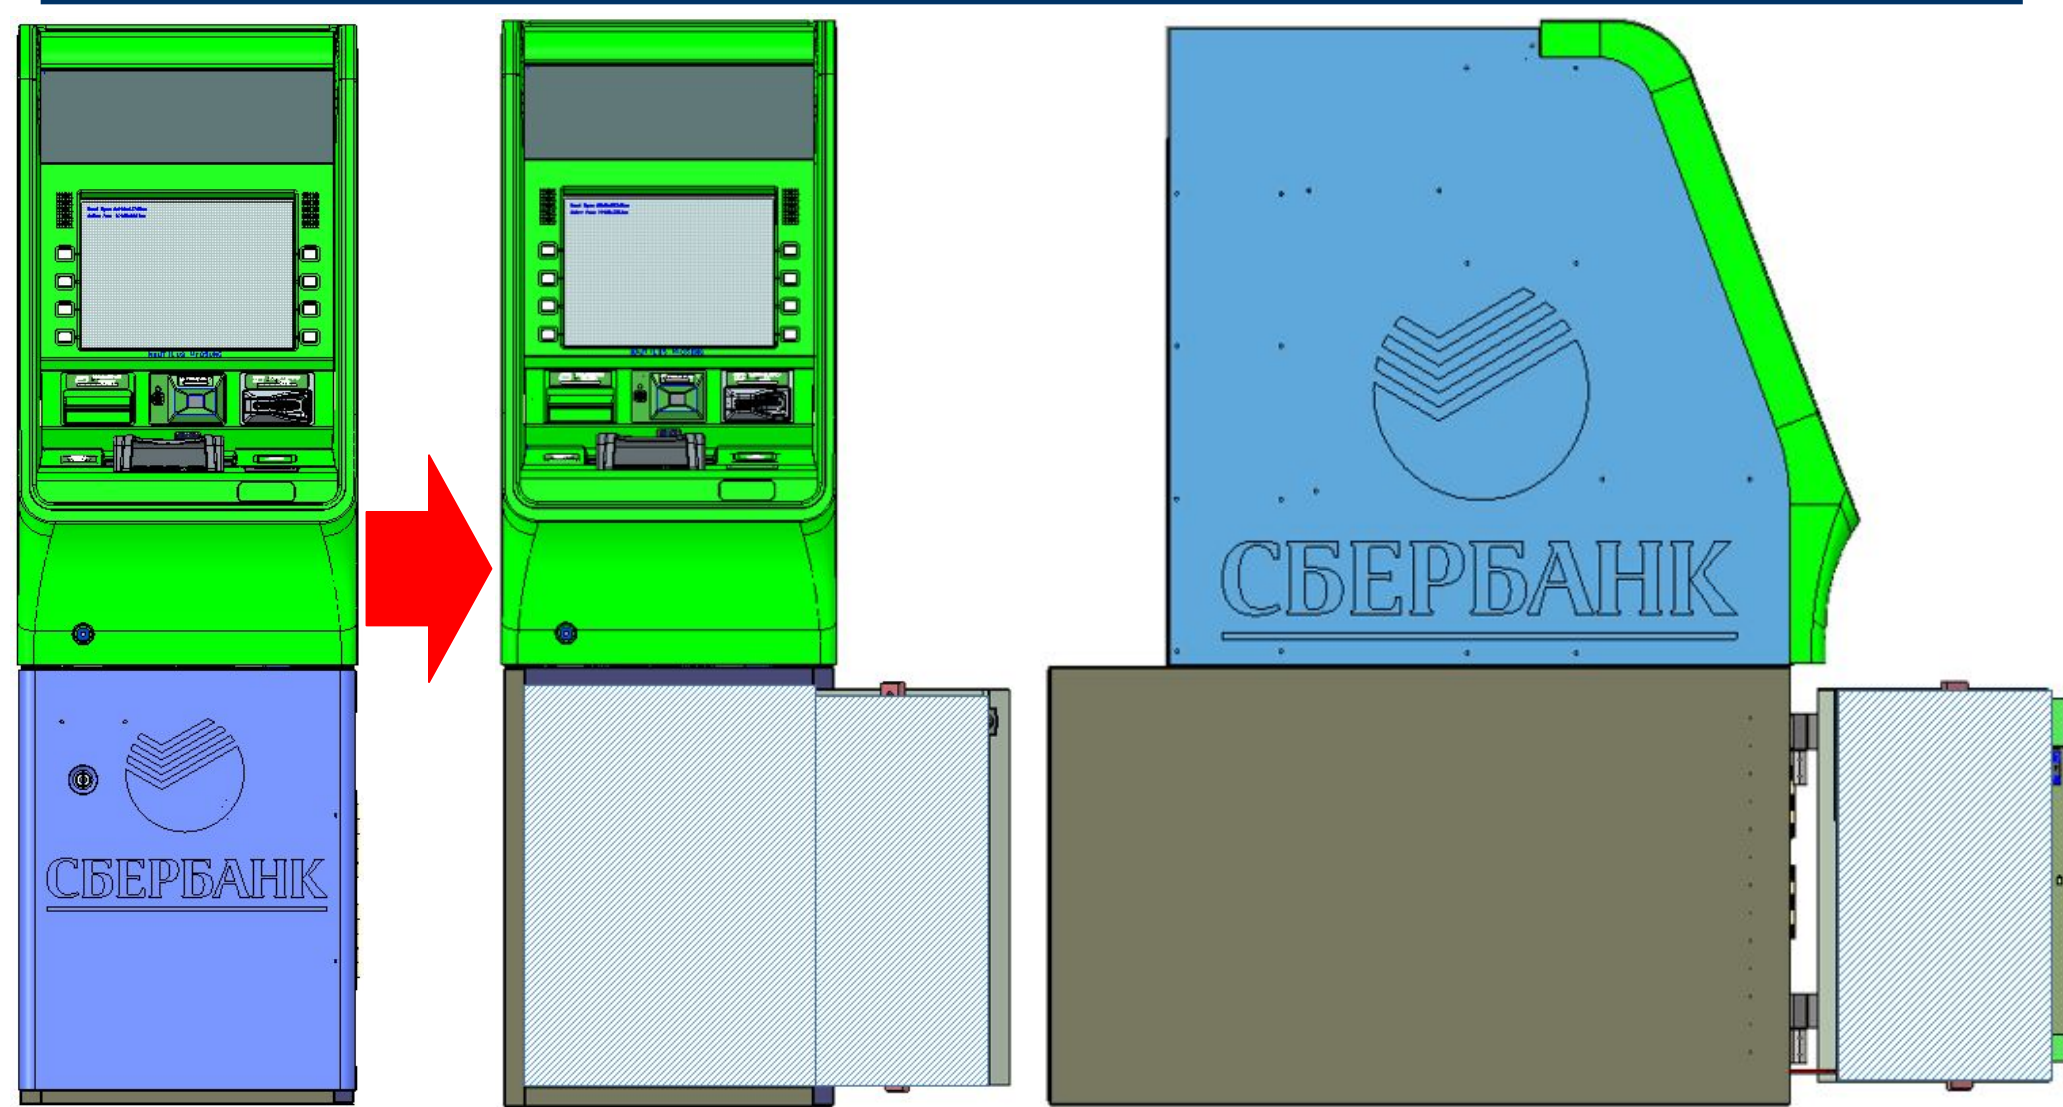

1. OPEN THE OUT DOOR AND SAFETY DOOR.



## 2-1. SAFETY-BODY HEATER INSTALLATION

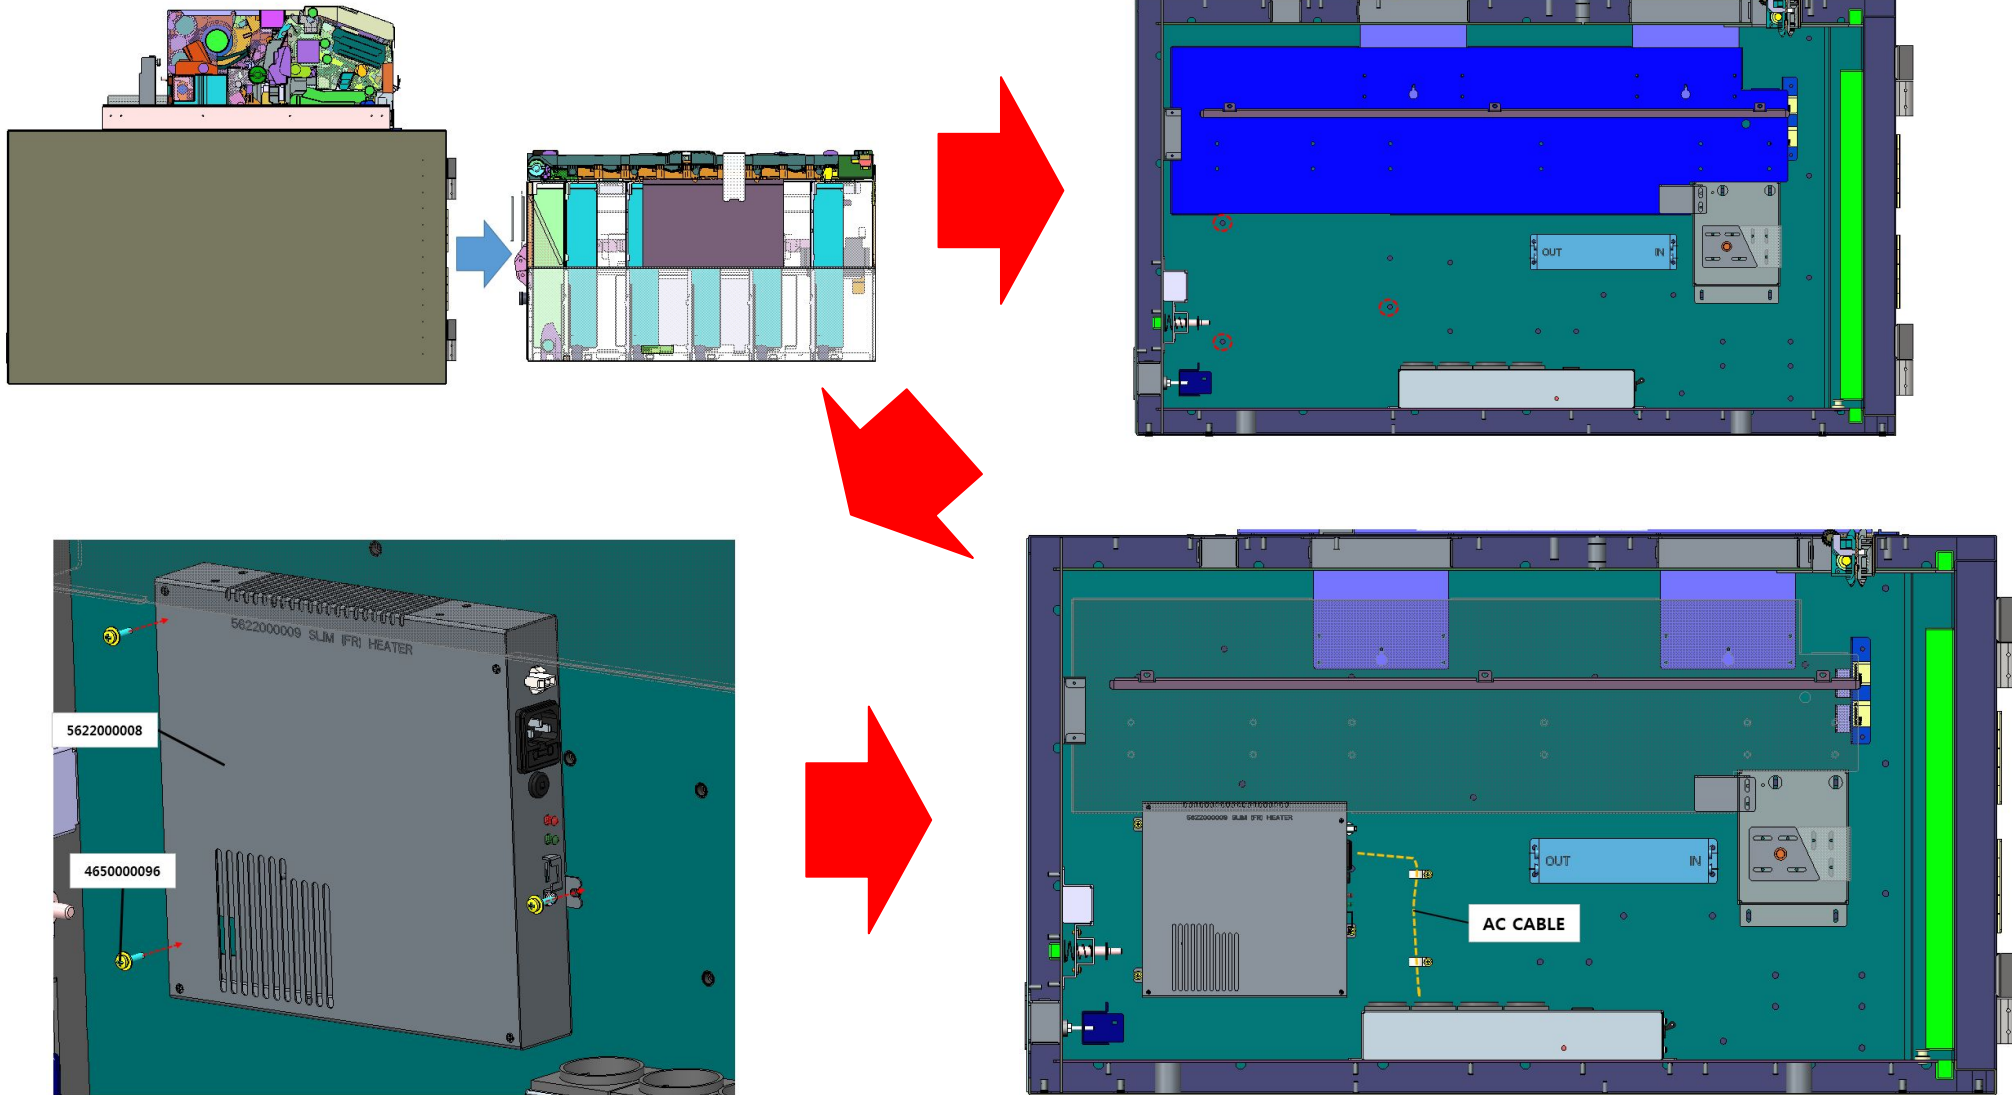

1. PULL OUT AND DISASSEMBLE BMD ASSY (SEE ABOVE PICTURE) FROM BMU MODULE.
2. ASSEMBLE HEATER (P/N562200009) ON BMD ASSY (SEE ABOVE PICTURE).