



IR Tester Manual

The purpose of IR-tester is to identify defective parts of the DCO_Board_Frame.

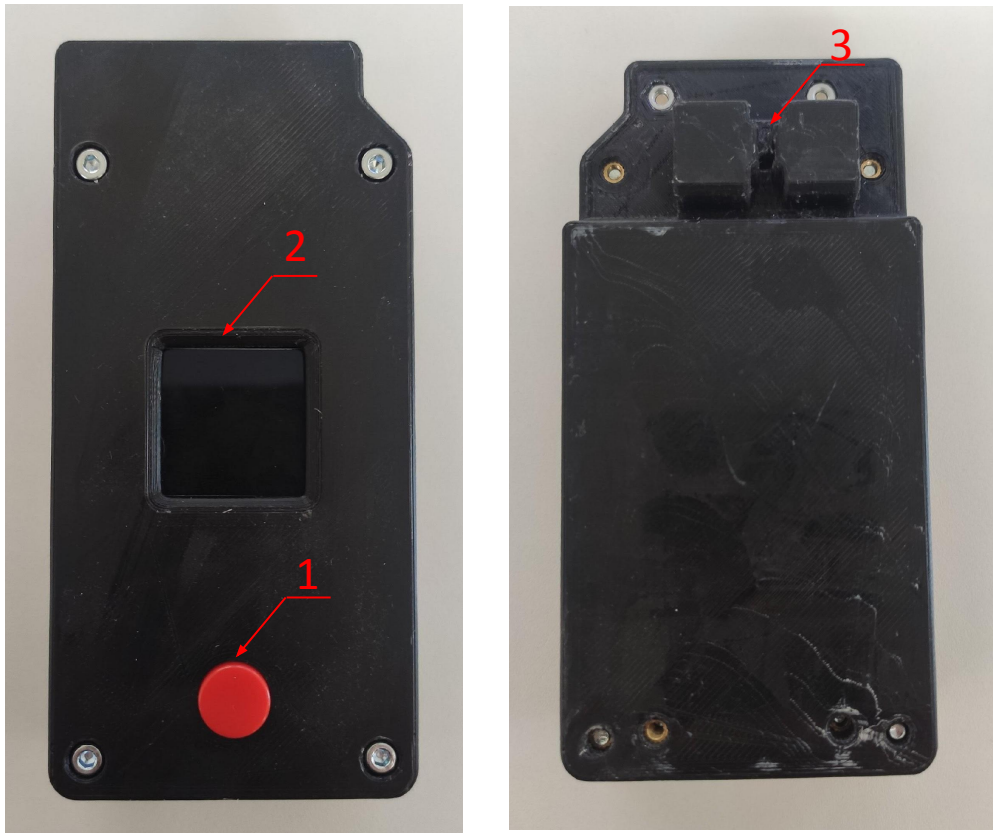

IR Tester

(1 – button, 2 – display, 3 – IR receiver and transmitter)

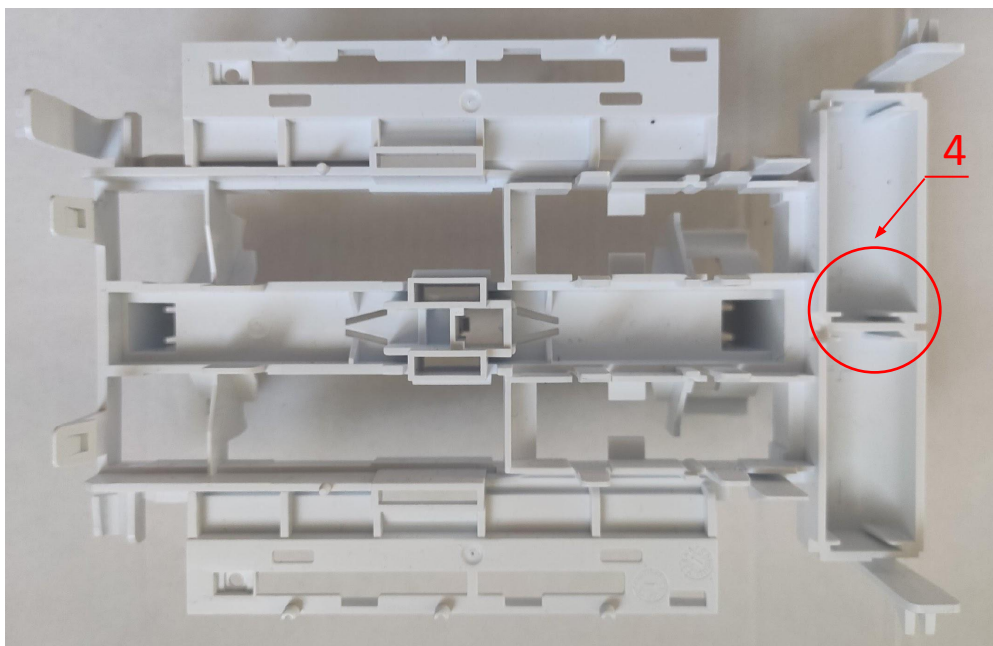


DCO_Board_Frame


(4 – measuring area)

The measurement sequence

1. Push the button (1) to enable the IR-tester. Display (2) will turn on.
2. Install the IR tester on the DCO_Board_Frame. The IR transmitter (3) must match the measured area on the DCO_Board_Frame (4).

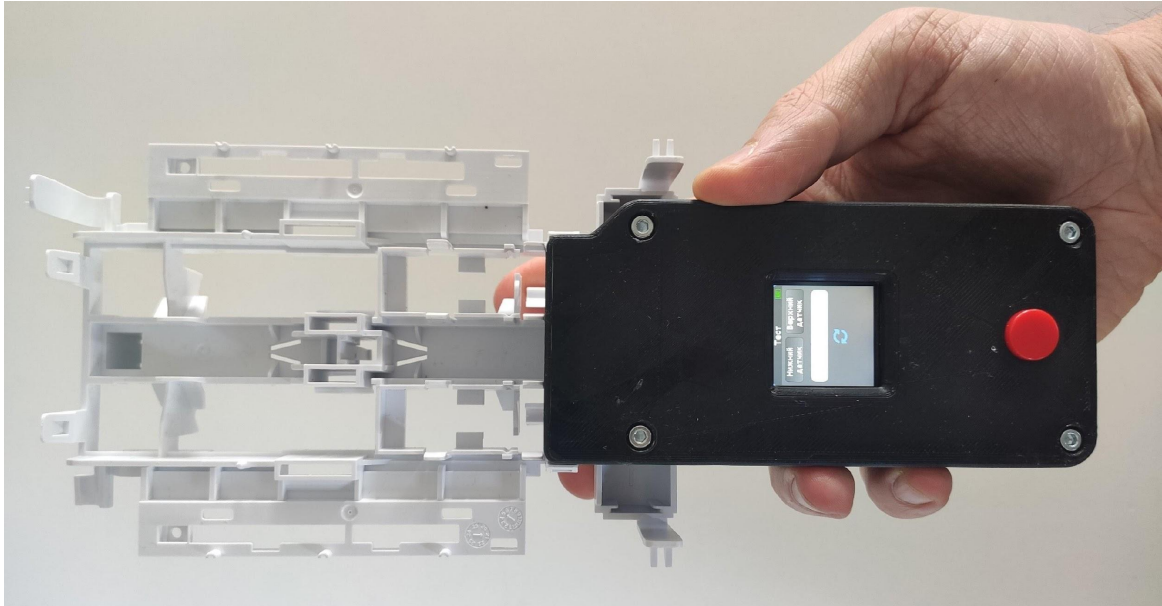



Please, watch the video

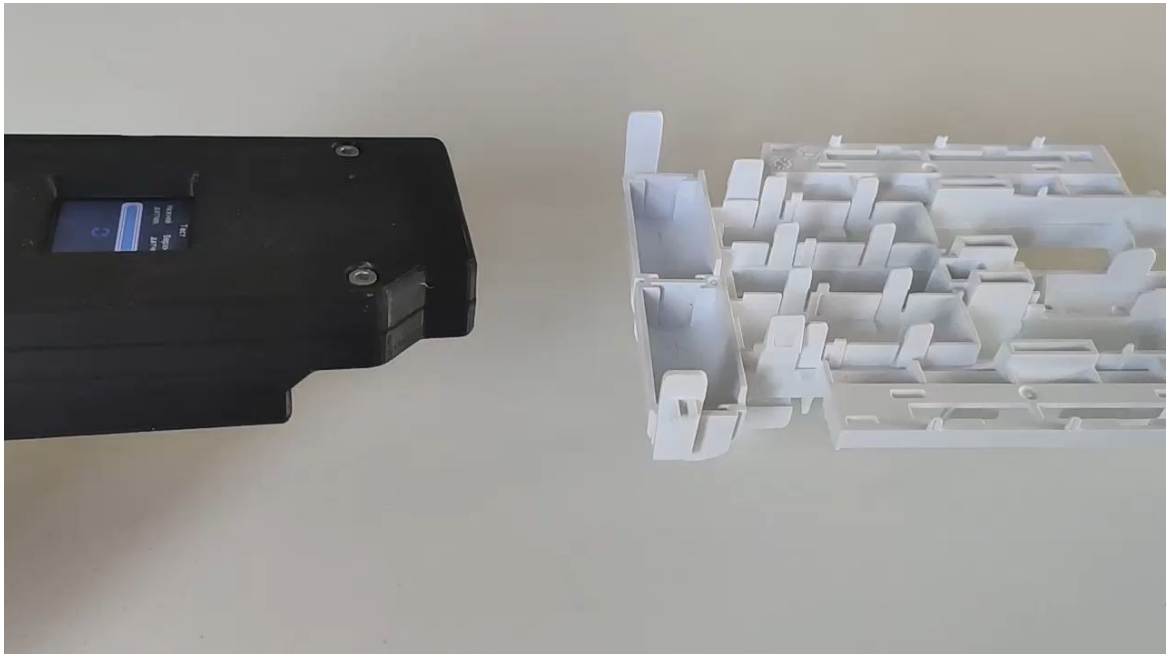

3. Push the button (1) to measure. Display (2) will show the result:

✓ - test passed

✗ - test failed

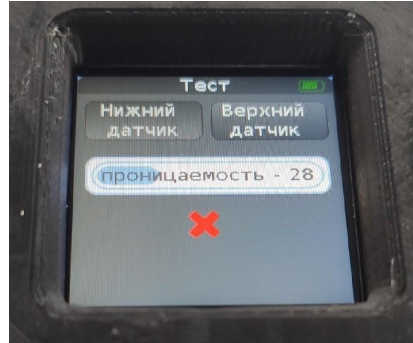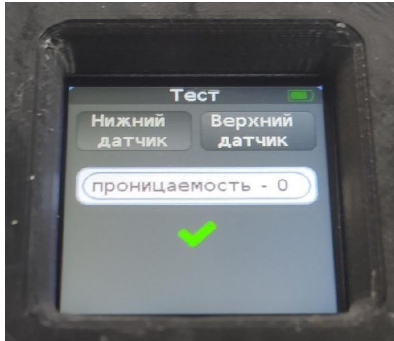

4. Push the button (1) to reset the value. The IR Tester is ready to next measure.

Charging

Use a Mini USB cable to charge from a 5V power supply.

