

CONFIGURATION ITEM SELECTION

ACM Configuration
Engine Dataset Registration
Engine Download Request Form
Engine Injector Code Configuration
Engine Injector Code Configuration (Original Screen With No Vehicle Controller Backup)
Engine Restart Counter Reset / Unlock Inducement
Engine Status And Information
General Configuration
Machine Statistical Data Log
Replacement of Catalyst - Reset ECU Data
Replacement of the Crank Case Pressure Sensor - Reset ECU Data
Replacement of the Nox Downstream Sensor - Reset ECU Data
Replacement of the Nox Upstream Sensor - Reset ECU Data
Replacement of the Rail Pressure Metering Unit - Reset ECU Data
Replacement of the Rail Pressure Relief Valve (PRV) - Reset ECU Data
Replacement of the SCR Dosing Module - Reset ECU Data
Retrieve Vehicle Status Report
Set UCM CAN Address
Sub-System Installation Configuration
Tractor Model Selection

CONFIGURE SELECTED ITEM

Click on engine status

Scroll down in this collum. The last two lines are injected fuel and fuel quantity set point. The injected fuel must be below the set point. If they are matching something is limiting the power.

Here you can see if something is limiting the engine power

[illegible]