

# TPMS Tool F01 Upgrade process

**FARTEC GROUP**

**AUG 27, 2019**

**Video Links: [https://youtu.be/L4\\_P8rKn2EM](https://youtu.be/L4_P8rKn2EM)**

# 1. Unzip the upgrade client



3. Find the client on desktop or your computer and double click it.



### TPMS TOOLS

Add license

Boot version V02.04.00

Software version V04.21.01

Hardware version V00.00.01

Database version V01.10.01

Device SN

Device PN


1. Connect the device to the computer and enter the update mode
2. Make sure the device was "Update Mode"
3. Select the right update file
4. Waiting for the update completed
5. Disconnect the device from the computer and restart the device

Select file


Incremental upgrade

Update

# 4. Power on F01 tool, find “Update equipment” in Setting and connect it to computer.

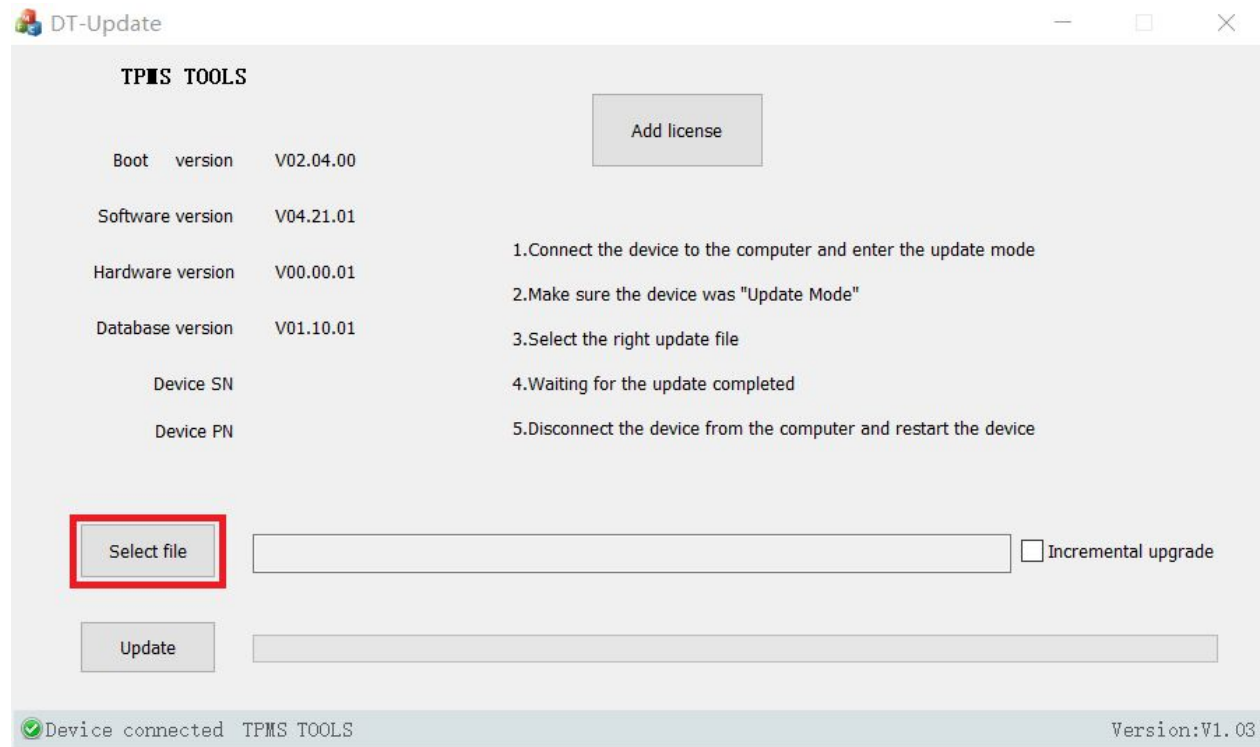

5. Select the upgraded software in your computer and click update.

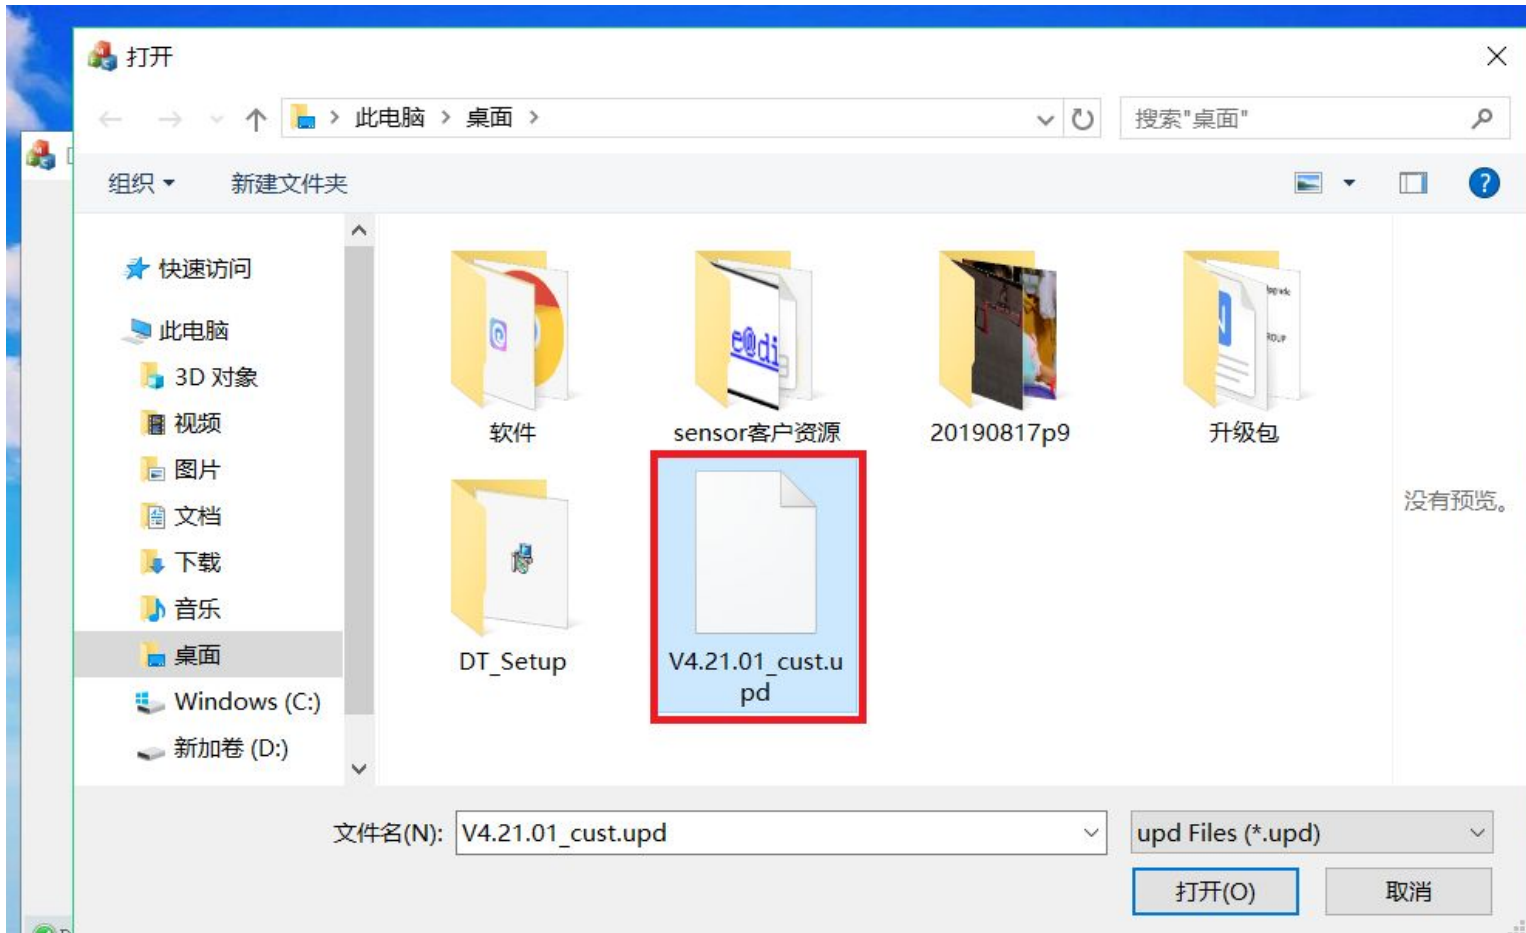

### TPMS TOOLS

Add license

Boot version V02.04.00  
Software version V04.21.01  
Hardware version V00.00.01  
Database version V01.10.01  
Device SN  
Device PN

- 1.Connect the device to the computer and enter the update mode
- 2.Make sure the device was "Update Mode"
- 3.Select the right update file
- 4.Waiting for the update completed
- 5.Disconnect the device from the computer and restart the device


Select file

C:\Users\kong\Desktop\V4.21.01\_cust.upd

Incremental upgrade

Update

# 6. Plug out the tool and computer from USB after update ended

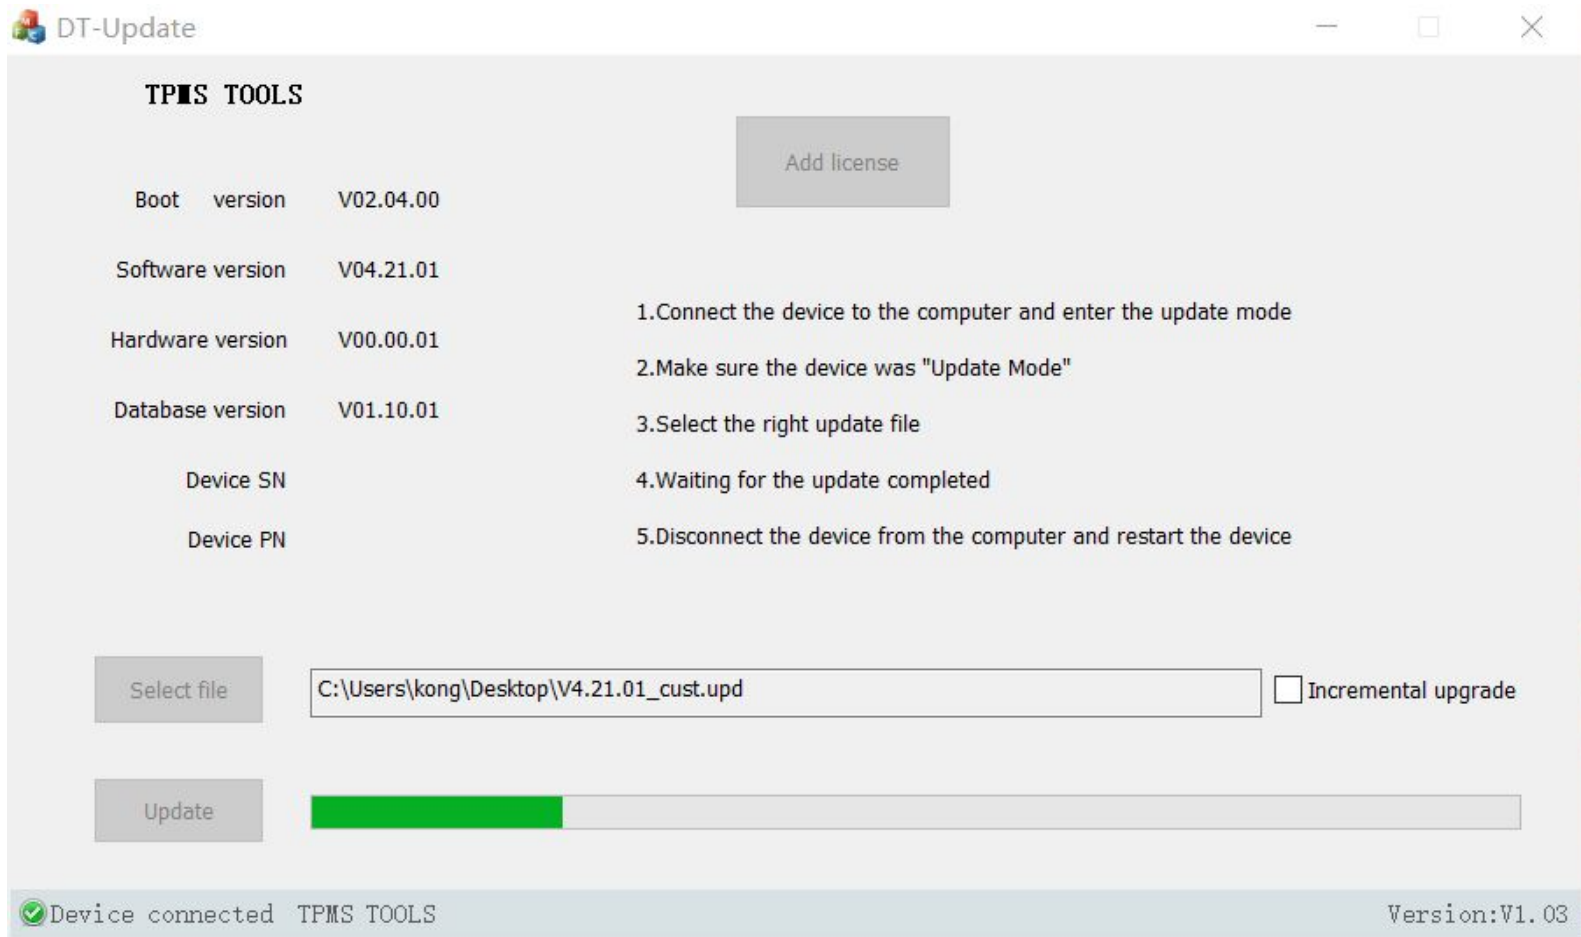




### TPMS TOOLS

Add license

Boot version V02.04.00  
Software version V04.21.01  
Hardware version V00.00.01  
Database version V01.10.01  
Device SN  
Device PN

DT-Update

 Update done.  
Device will disconnect and restart.

确定

er the update mode

d restart the device

Select file

C:\Users\kong\Desktop\V4.21.01\_cust.upd

Incremental upgrade

Update

