



Pin for side brake – replacement instructions

1

Open
screw

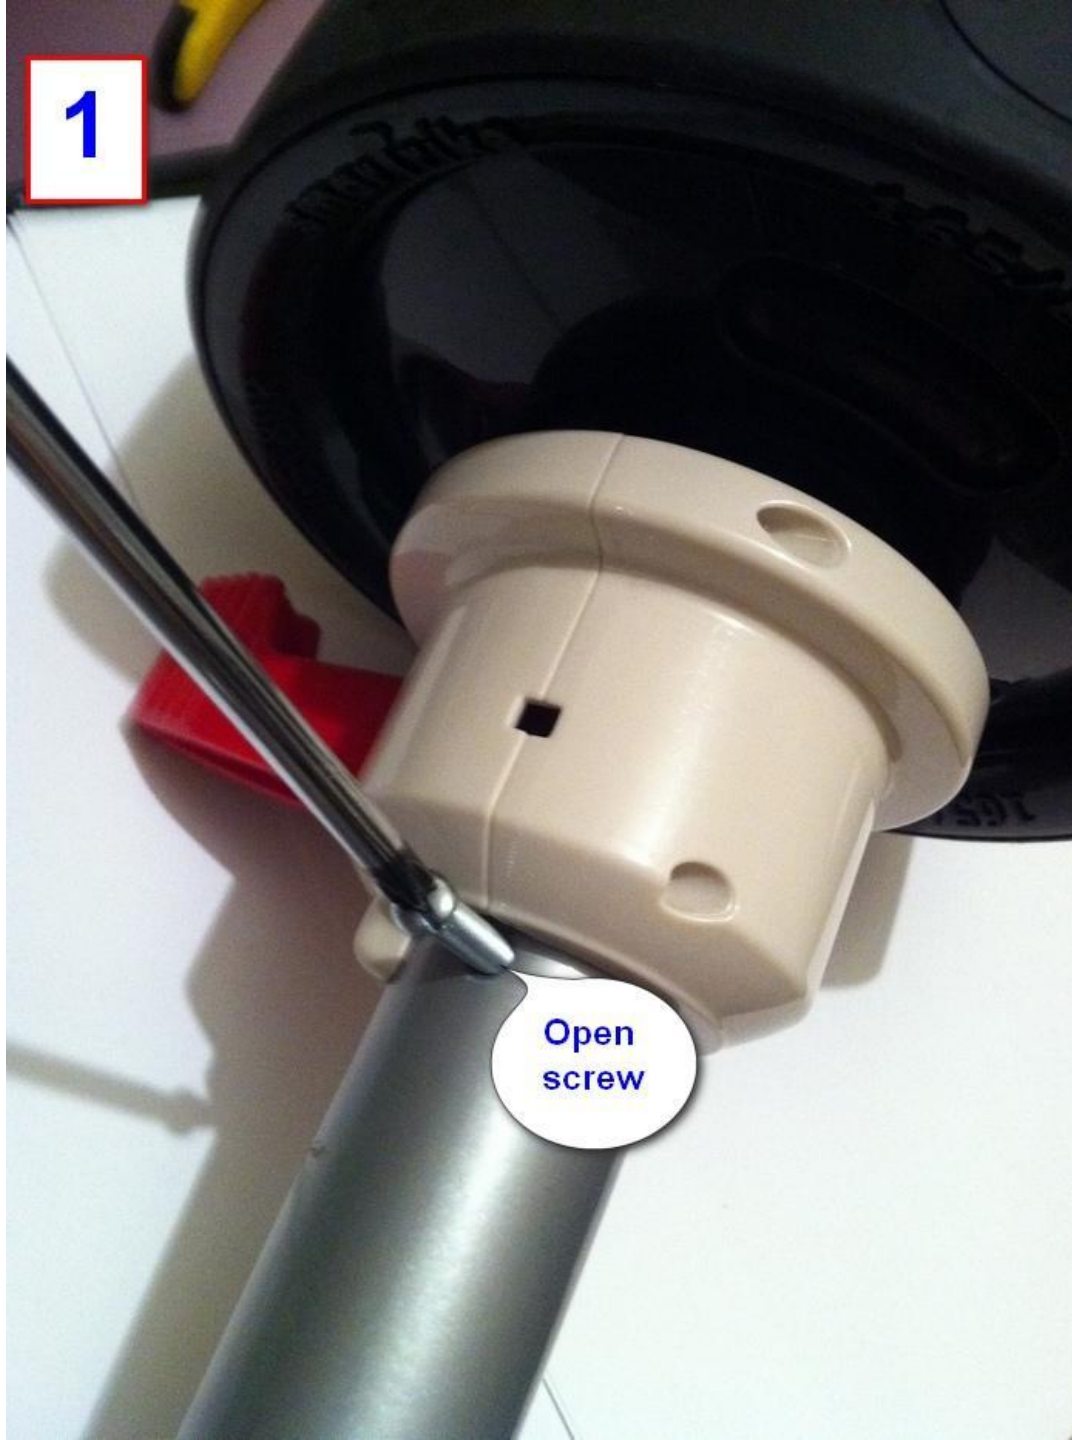

2




A close-up photograph showing a black plastic wheel being pulled out of a device. A yellow arrow points from the text 'Pull out the wheel' to the wheel. To the right, a red and white plastic component is visible.

Pull out the
wheel

3

Pull out the pin with the
spring

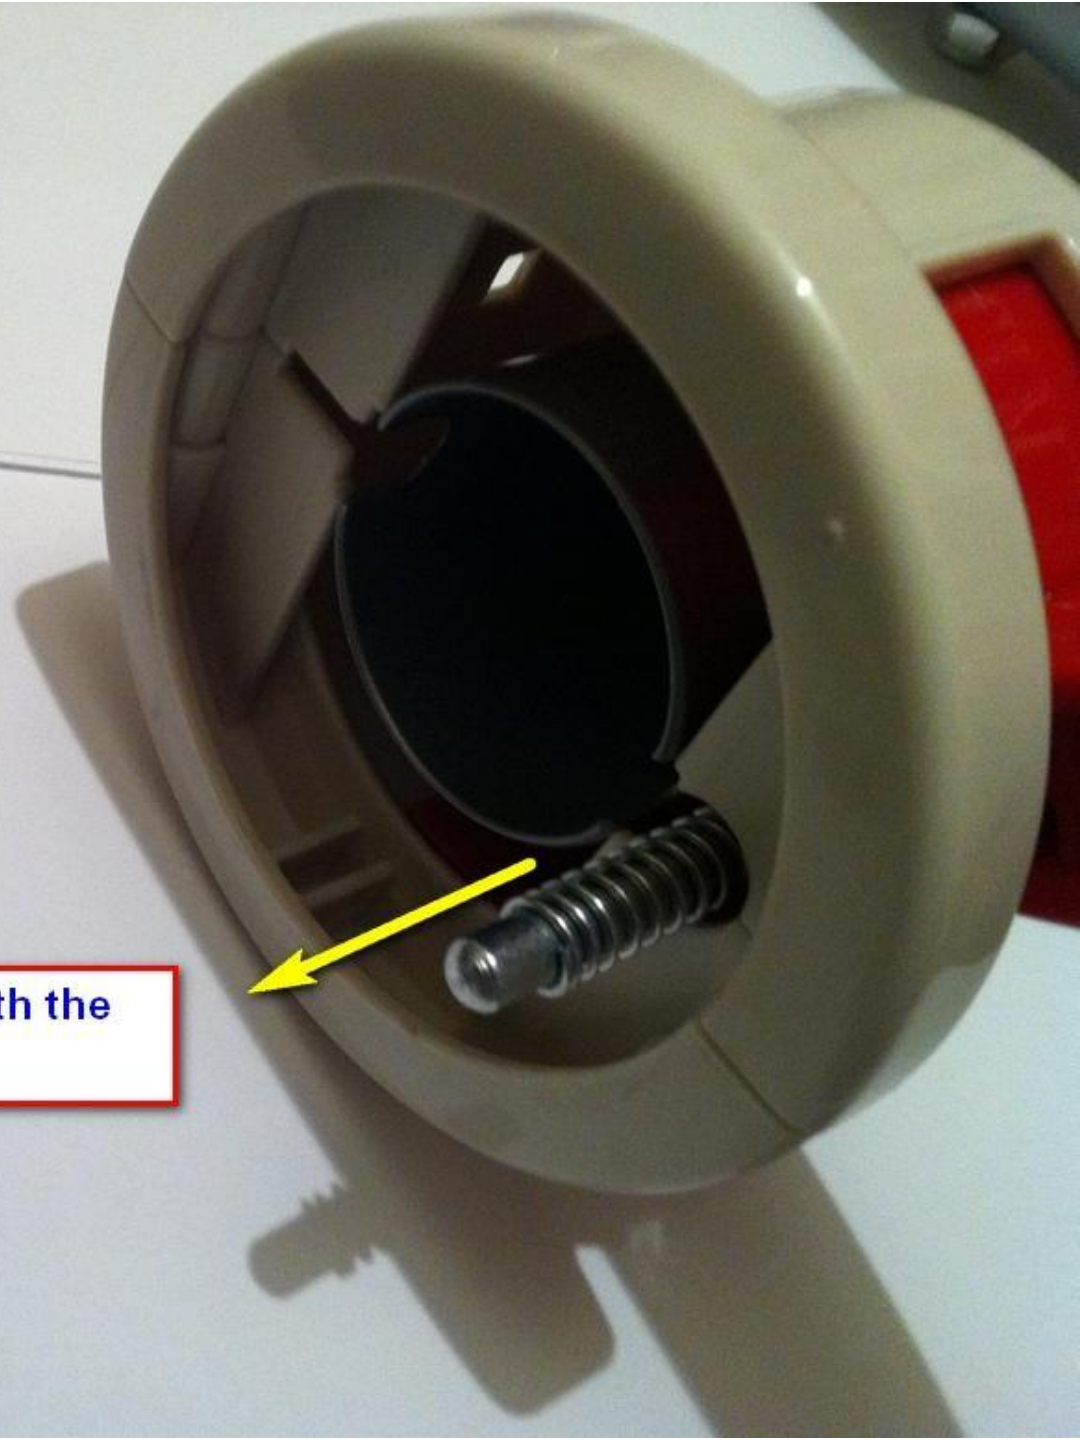

4



Replace the pin

5


Slide the pin with
the spring into the
sleeve on the wheel
holder



6

Slide the wheel into the pipe

Direct the metal pin into the hole in the brake housing

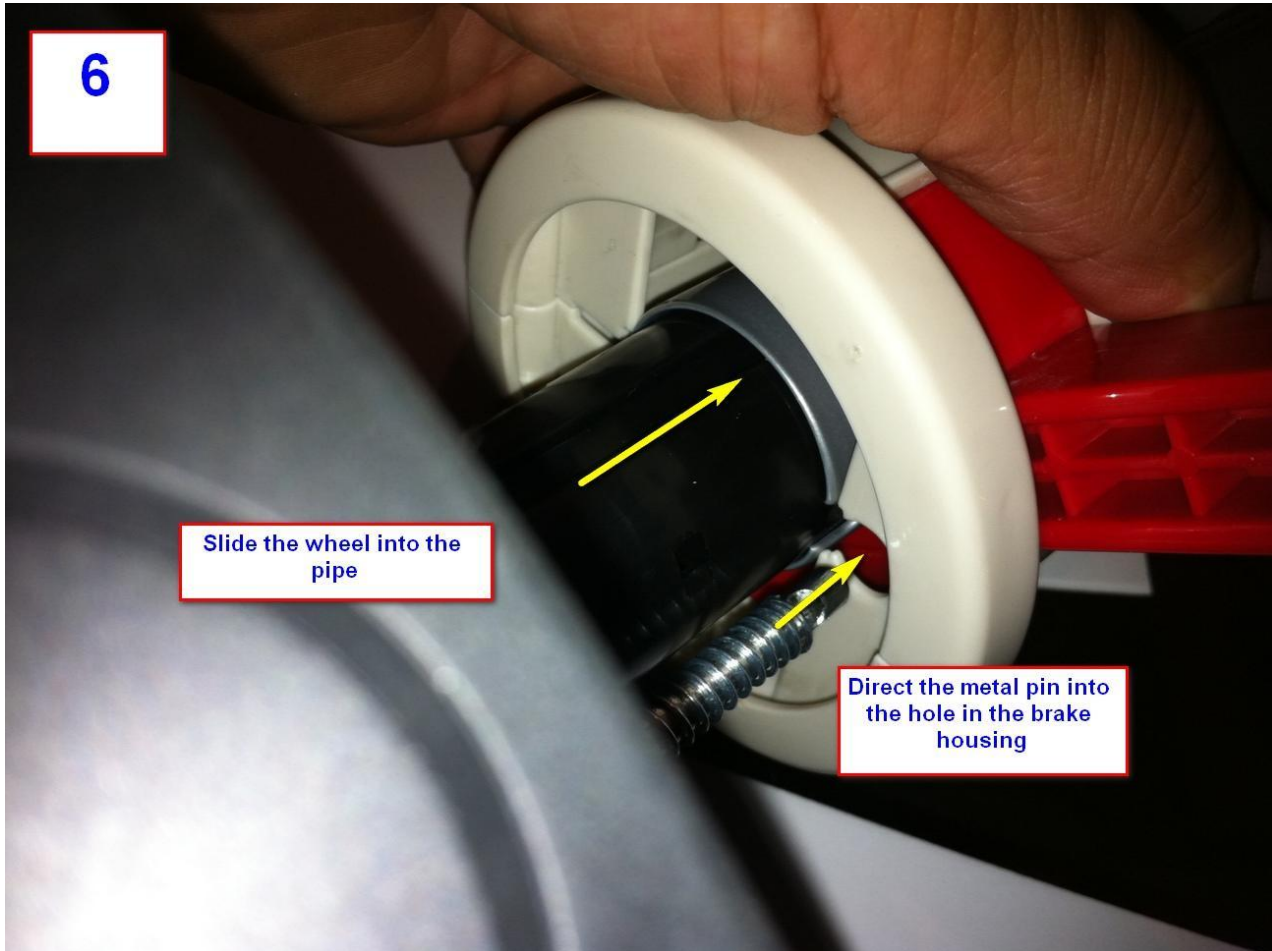

7



close back the screw

Pull the lever up and down few times and check if it stopes the wheel from turning