

Step 2 : Setting of Electronic expansion valve

Step 2-1 Remove silicone seal

Silicone seal



Step 2-1 Remove coil for expansion valve



Step 2-3

Put emergency coil cap on valve body



*Emergency coil cap is in the onboard spare parts kit

Step 2-4

Close the valve with the Minus screw driver
(Clockwise direction) softly until the driver stop



Step 2-5

Slightly open (60°) with counterclockwise direction

