ZOOM TV Description (ZOOM TV)

Revision History

Version	Date	Description	Author
1.0	2013.09.18	First version of document	Mikhail Baklanov
1.1	2014.02.19	Completely rewrote according to app multiple changes	Anuar Turenov
1.2	2014.03.26	Subscriptions screen were added to app - changes in main screen description and regular app work diagram	Anuar Turenov
1.3	2014.04.23	Subscriptions and card payment diagram were added	Anuar Turenov
1.4	2014.07.25	Timeshift logic added	Mikhail Baklanov
1.5	2015.01.29	Troubleshooting popup added	Mikhail Baklanov
1.6	2015.05.29	Application redesign	Mikhail Baklanov
1.7	2015.12.28	Player menu added	Georgiy Maksimov
1.8	2016.12.16	Detailed app description. Changed player. New time zone selection scene.	Georgiy Maksimov
2.2	2018.08.07	New main scene and channels scene. Added live and archive scenes	Sergey Shilyaev
2.5.1	2019.07.24	Fix timezone scene and player bar	Sergey Shilyaev
2.5.2	2019.08.02	Fix css bug	Sergey Shilyaev
2.5.3	2019.08.07	Fix payment bug	Sergey Shilyaev
2.7.0	2020.01.28	Add vitrinatv player	Aleksander Markov
2.7.4	2020.06.04	Fix bug with archive for same channels and add smooth list animation	Sergey Shilyaev
2.8.0	2020.01.26	The new main scene with blocks as primary UI elements	Georgiy Maksimov
2.10.0	2021.05.06	The account feature, promocode input, and player redesign	Georgiy Maksimov

Contents

- UI Structure
- Usage Scenario
- Menu & function description
- Key policy



Usage Scenario

- 1. Watch video intro
- 2. See account creation offer
- 3. Use main scene to navigate between content
- 4. Use navigation buttons in case of additional menu (account, settings, packages)
- 5. Use account page to get subscription, perform payment, or unbind credit card
- 6. Use settings page to choose time zone or categories of TV shows and make speed test.
- 7. Use packages page to get packages info and get subscription
- 8. Choose any TV show on channels, archive or live page
- 9. Use player controls for playback manipulation

Main scene



• Live/Archive scene



1	LEFT/RIGHT – navigation between categories
2	UP/DOWN – navigation between TV shows OK – select TV show

• Channels scene

		>>>	KAHOKHT	Marchae	THT
	исповеда певидимки			6:55	
	Фанфан-Тюльпан			8:40	
	Большой папа			10:30	
	Мальчик в девочке	2		12:10	
lacksquare	оспожа горничная			13:55 Live	
	Соседка			15:55	
	Четыре комнаты			17:50	
	Ірактическая магия			19:40	
	Ходят слухи			21:40	

1	LEFT/RIGHT – navigation between channels
2	UP/DOWN – navigation between TV shows
	<i>OK – select TV show</i>

• Settings scene

	2	
CЧЕТ № 6907170	-	Мои подписки
Мои подписки		
Все включено	до 27 мая	Мои устройства
Матч! Премьер	до 13 мая	
Управлять подписками		14:52 Настроить время
Посмотреть, подключить, отключить		161.94 мбит/сек Запустить тест скорости
		Ввести промокод
		Свяжитесь с нами если возникли трудности
<i>1 Sections: subscriptions, device</i>	s, time zone, spee	d test, promocode input

2 Section view

• Payment methods scene

	terCard/MMP	Henes CMC	1
Возник		или вопросы?	
Позвоните бесп	илатно:	Напишите нам:	
8-800-775	7-982 sup	port@zoom	.re
Больше способов Совершая платеж, вы согла	пополнения счет шаетесь с условиями оф	та: http://зумтв.p¢ рерты, размещенной на с	/оплата зайте зумтв.рф

1	Navigation menu (payment methods) left to right: via card (current), SMS
2	OK - select

• Payment via card scene



Test card information: **number**: 4111 1111 1111 **month/year**: 12/<current year> **cvv/cvc**: 111

1	Payment card info
2	Numeric keyboard
3	Ok and bind card checkbox

• Payment via SMS scene



1	Russian phone number
2	Numeric keyboard
3	OK - confirm

Test phone number information: +7 911 111 11 12

Packages scene

1	Lite	Базовый Станд	все включено артный наб Без антенн,	Настрой кино бор из 24 ос перебоев	Матч! Премьер СНОВНЫХ КАНА И ПЕРЕПЛАТ.	Матч! Футбол алов.	
		23 канал в паке 2	па тте 30 ДН Подк.	ТЕЙ Перем пючить «Lite» за	 4 II ► иотка и пауза 99 ₽ 	архив передач 24 ЧАСА	R
3	РОССИЯ 24	THT	1 и еще 7	СТС 6 каналов в паке У	кисная ганыя те «Lite»	exe 5	

1	LEFT/RIGHT – navigation between packages
2	OK – choose the current package(go to payment scene)
3	DOWN/UP – show/hide channels list from the current package

Player scene

	сейчас 14:58	
2	Бойцовский клуб TV1000 Action	2:25:00
0.00.28	1 Прямой эфир 🕜 🖓	2.25.00

1	Controls (left to right): from begin, like, dislike
2	Progress bar: LEFT/RIGHT and OK to choose
3	DOWN/UP – open/close Progress bar
4	Scene: LEFT/RIGHT to jump (playback control)

Key policy

Button	Action	Remarks	
In player			
ENTER	Open menu scene		
DOWN	Show/hide top/bottom bars		
UP	Open channels scene		
RIGHT	Open archive scene		
LEFT	Open live scene		
PAUSE/PLAY	Pause/play current TV show		
FORWARD/BACKWA	RD Timeshifting current TV show if it is possible		
P+/P-	Open channels scene. Channel list (scrollable)		
Optional			
ENTER	Select element		
UP/DOWN/LEFT/RIGH	IT Move highlight		
RETURN	Move to previous page	Samsung Mandatory	
EXIT	Close the app and show broadcasting channel	Samsung Mandatory	
RETURN/EXIT	In case of Game App, if game is terminated, the exit popup should be displayed.	Samsung Mandatory	