

# Test Mode

## 1. BASESET

### Entering Test Mode

- Case 1  
When the power is 'OFF', press dial button '3' '6' '9' and the power 'ON' simultaneously.

- Case 2  
When the power is 'ON', press dial button '3' '6' '9' and press [RESET] button simultaneously. Then, release pressing the dial button after 2 sec.

∅ [REDIAL] : Test Mode is initialized

- Test Mode 1** - Talk Mode  
- Test Mode + '1' + [SP-PHONE] + Channel NO.(2digit)  
- Dial NO. '0' : RX Mute ON
- Test Mode 2** - Data Receiving Mode  
- Test Mode + '2' + [Sp-PHONE] + Channel NO.(2digit)
- Test Mode 3** - ID NO. Confirmation Mode  
- Test Mode + '3'
- Test Mode 4** - Data Transmitting Mode  
- Test Mode + '4' + [SP-PHONE] + Channel NO.(2digit)
- Test Mode 5** - ID NO. Entering Mode  
- Test Mode + '5' + ID NO.(6digit)
- Test Mode 6** - Continuous data transmitting Mode  
- Test Mode + '6' + [SP-PHONE] + Channel NO.(2digit)
- Test Mode 7** - Test for LCD & LED  
- Test Mode + '7'

## 2. HANDSET

### Entering Test mode

- When the power is 'OFF', press the dial button '3' '6' '9' and the power 'ON' simultaneously.

∅ [REDIAL] : Test Mode is initialized

- Test Mode 1** - Talk Mode  
- Test Mode + '1' + [TALK] + Channel NO.(2digit)  
- Dial NO. '0' : RX Mute ON
- Test Mode 2** - Data Receiving Mode  
- Test Mode + '2' + [TALK] + Channel NO.(2digit)
- Test Mode 3** - ID NO. Confirmation Mode  
- Test Mode + '3'
- Test Mode 4** - Data Transmitting Mode  
- Test Mode + '4' + [TALK] + Channel NO.(2digit)
- Test Mode 5** - ID NO. Entering Mode  
- Test Mode + '5' + ID NO.(6digit) + Intercom NO.(1digit)
- Test Mode 7** - Test for LCD & LED  
- Test Mode + '7'
- Speakerphone Test Mode** - Test for Speakerphone  
- Test Mode + [SP-PHONE]