

Test Mode

1. BASESET

Entering Test Mode

- Case 1
When the power is 'OFF', press dial button '3' '6' '9' and the power 'ON' simultaneously.

- Case 2
When the power is 'ON', press dial button '3' '6' '9' and press [RESET] button simultaneously. Then, release pressing the dial button after 2 sec.

- Test Mode 1** - Talk Mode
- Test Mode + '1' + [SP-PHONE] + Channel NO.(2digit)
- Dial NO. '0' : RX Mute ON
- Test Mode 2** - Data Receiving Mode
- Test Mode + '2' + [Sp-PHONE] + Channel NO.(2digit)
- Test Mode 3** - ID NO. Confirmation Mode
- Test Mode + '3'
- Test Mode 4** - Data Transmitting Mode
- Test Mode + '4' + [SP-PHONE] + Channel NO.(2digit)
- Test Mode 5** - ID NO. Entering Mode
- Test Mode + '5' + ID NO.(6digit)
- Test Mode 6** - Continuous data transmitting Mode
- Test Mode + '6' + [SP-PHONE] + Channel NO.(2digit)
- Test Mode 7** - Test for LCD & LED
- Test Mode + '7'

∅ [REDIAL] : Test Mode is initialized

2. HANDSET

Entering Test mode

- When the power is 'OFF', press the dial button '3' '6' '9' and the power 'ON' simultaneously.

- Test Mode 1** - Talk Mode
- Test Mode + '1' + [TALK] + Channel NO.(2digit)
- Dial NO. '0' : RX Mute ON
- Test Mode 2** - Data Receiving Mode
- Test Mode + '2' + [TALK] + Channel NO.(2digit)
- Test Mode 3** - ID NO. Confirmation Mode
- Test Mode + '3'
- Test Mode 4** - Data Transmitting Mode
- Test Mode + '4' + [TALK] + Channel NO.(2digit)
- Test Mode 5** - ID NO. Entering Mode
- Test Mode + '5' + ID NO.(6digit) + Intercom NO.(1digit)
- Test Mode 7** - Test for LCD & LED
- Test Mode + '7'
- Speakerphone Test Mode** - Test for Speakerphone
- Test Mode + [SP-PHONE]

∅ [REDIAL] : Test Mode is initialized