


Pressure sensor replacement manual



Remove cover

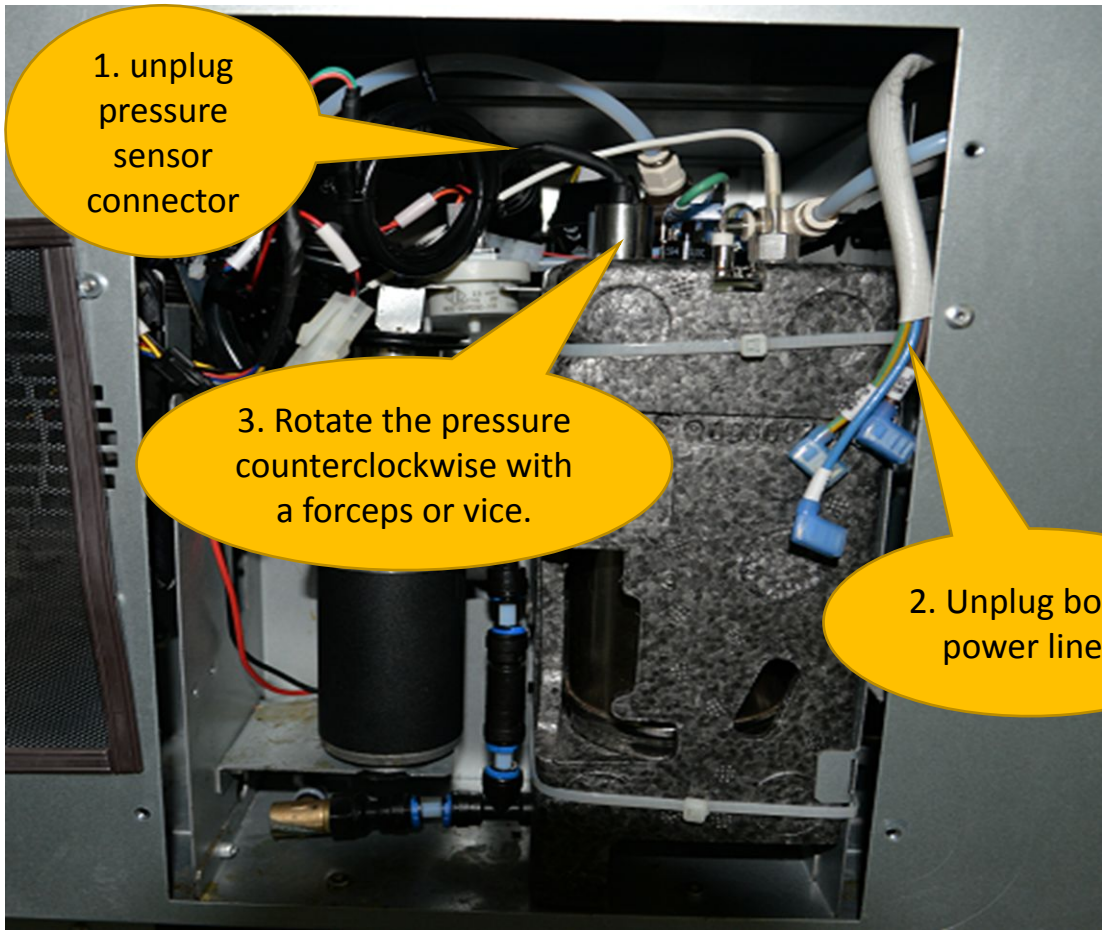

Take pressure sensor out