COWL

ANTICE


SYSTEM



* COMPONENT LOCATION

* SYSTEM DESCRIPTION



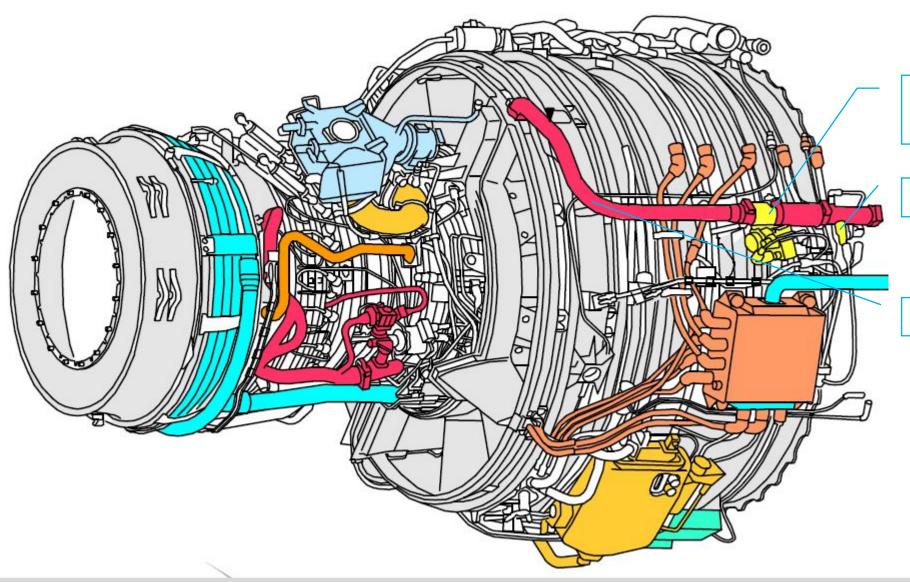


* INLET COWL THETMAL ANTI ICE VALVE




* OVER PRESSURE SWITCH




* COWL ANTI ICE DUCT

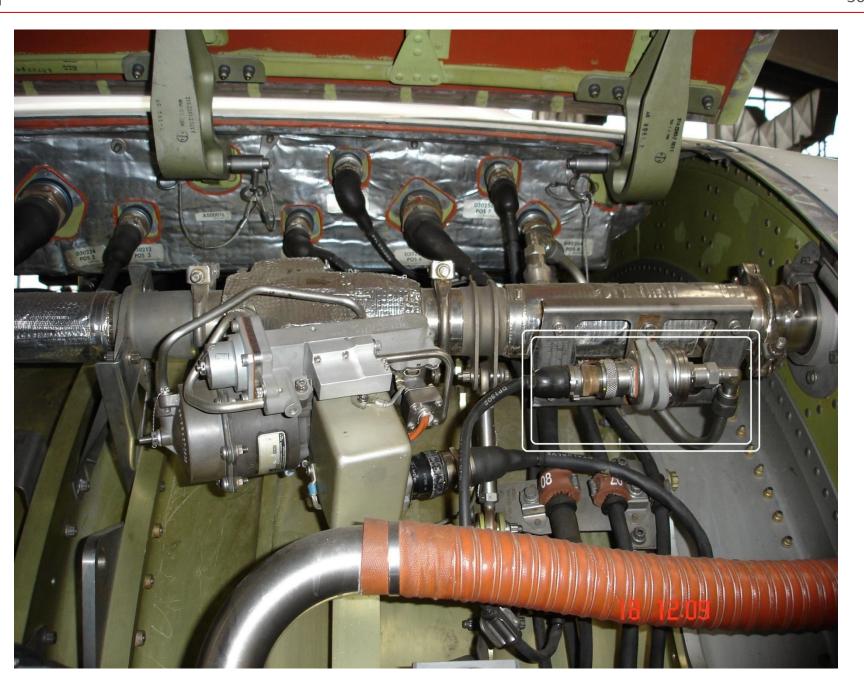


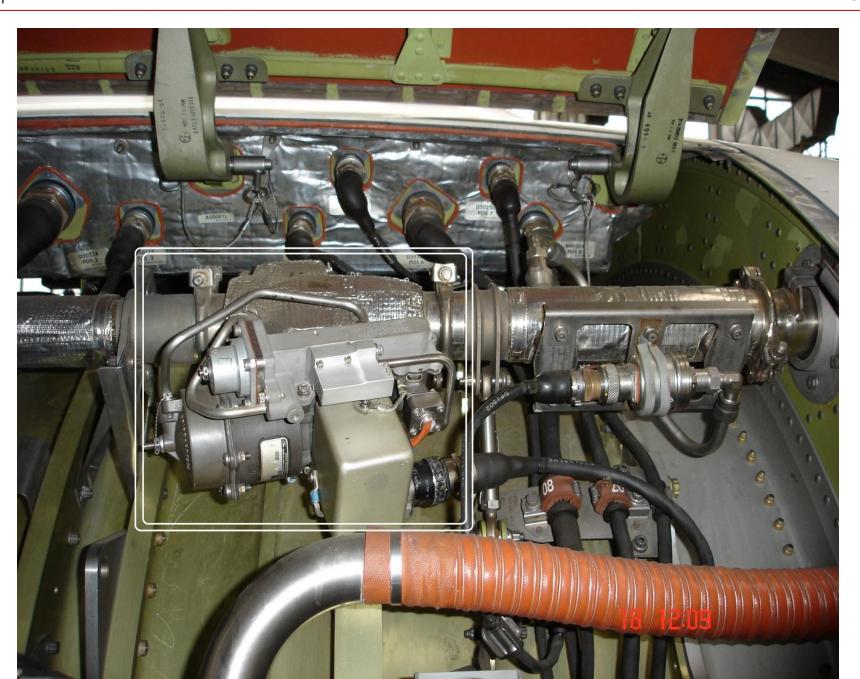

The inlet cowl anti-ice valve is an electrically controlled and pneumatically operated butterfly valve. It is spring loaded to the closed position.

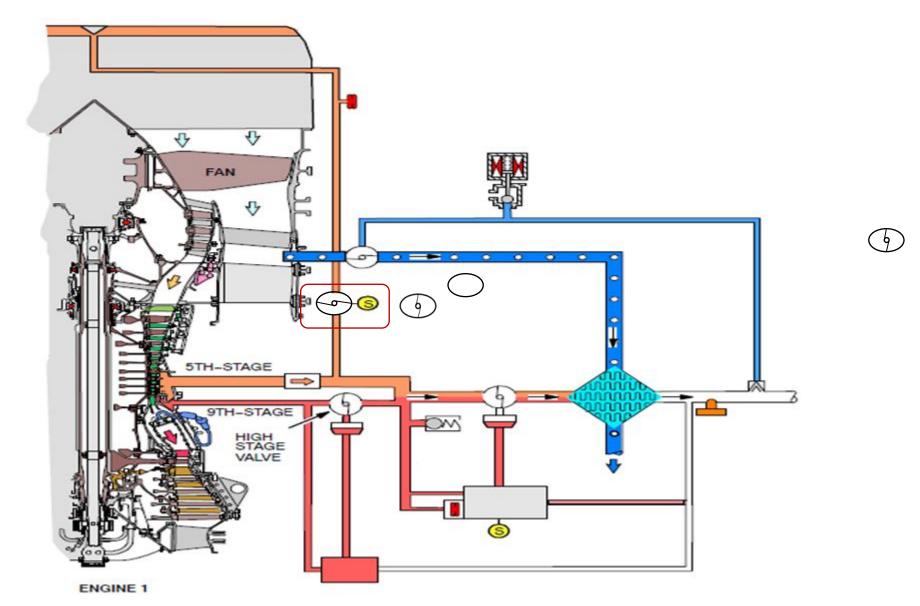

When the engine is runing, air comes and waits for selenoid activation to open the valve.

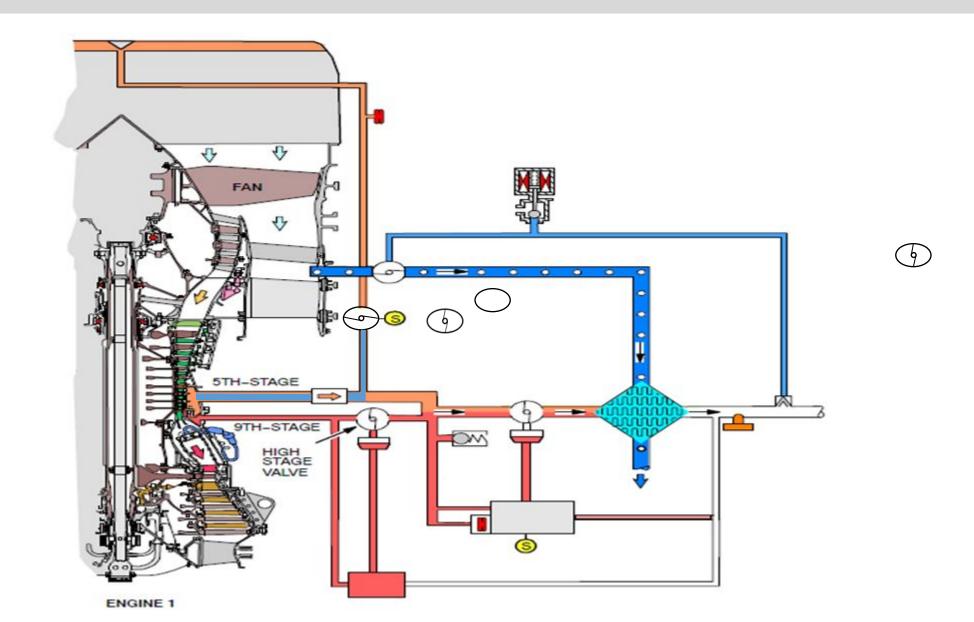

THANKS FOR WATCHING

BY H.AYDIN