



# Steering parameter adjustment for three wheel electric forklift

Prepared by: Joey  
Date: 2022/8/5



- 1 To input password
- 2 Streering parameter monitor
- 3 To adjust streering parameter
- 4 Sotre parameter

# 1 To input password



Key switch on, press the "OK" key, enter the password, the password is pressed 5 times "▽" key, press OK to enter.



## 2 Steering parameter monitor





a Move the cursor to "2 Operate monitor" , click "OK" to enter.

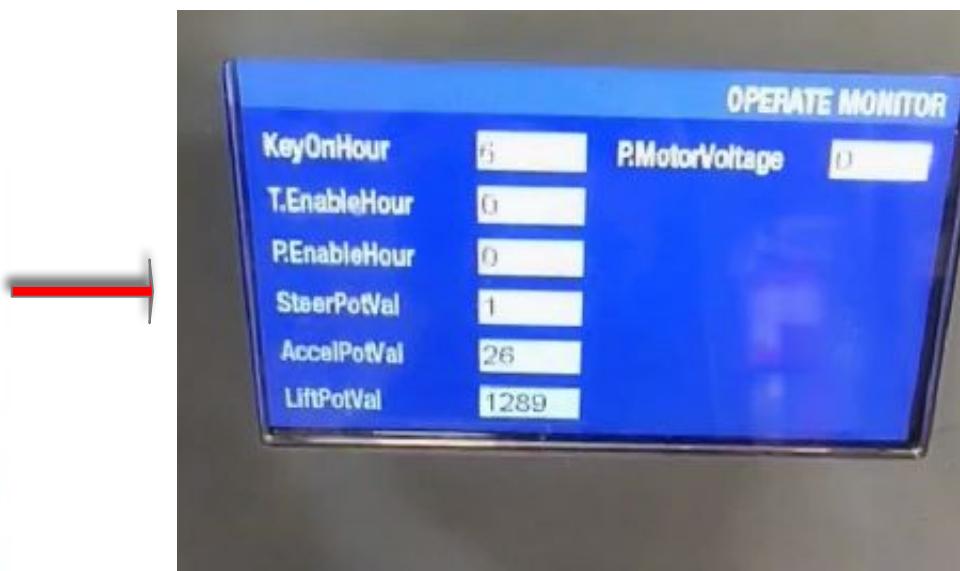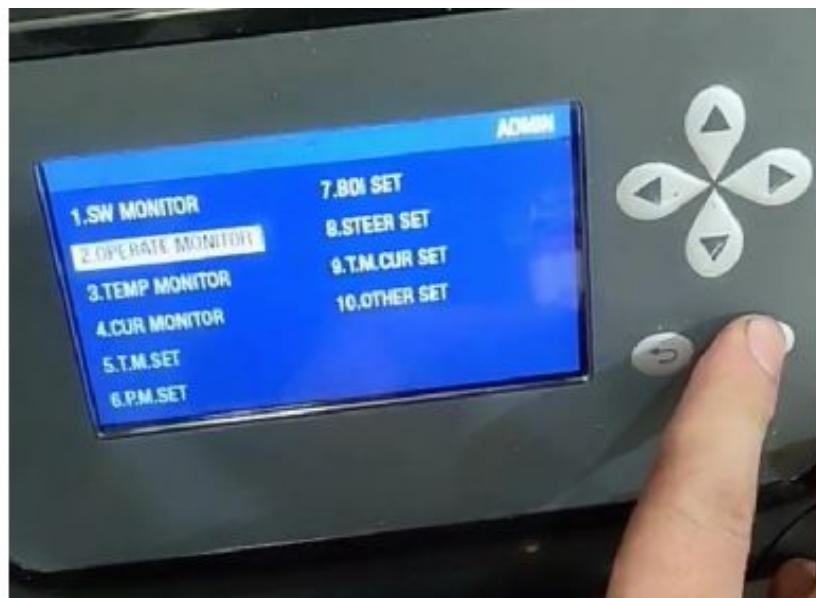

## 2 Steering parameter monitor





b Turn right to the end , look at the LiftpotVal change from 1289 to 2066. To record the value 2066 in right turn.

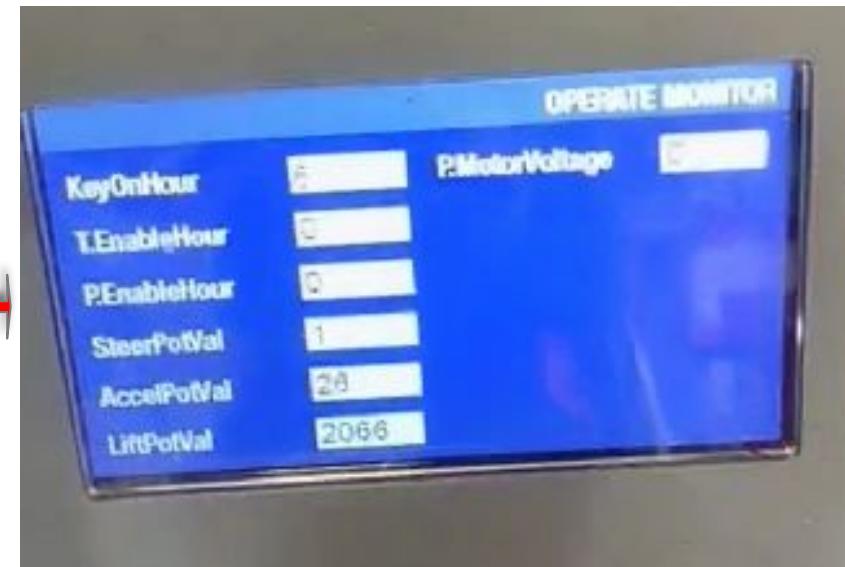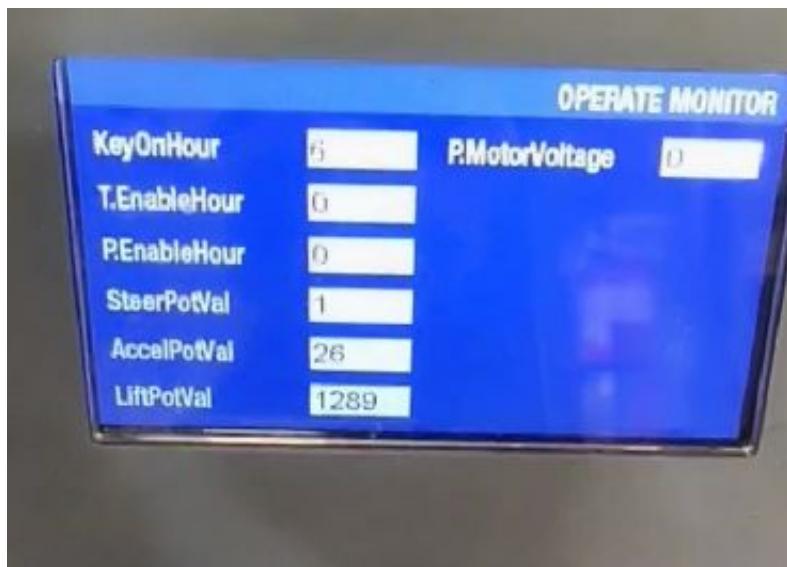

## 2 Steering parameter monitor



c Turn left to the end , look at the LiftpotVal change from 2066 to 736. To record the value 736 in left turn.

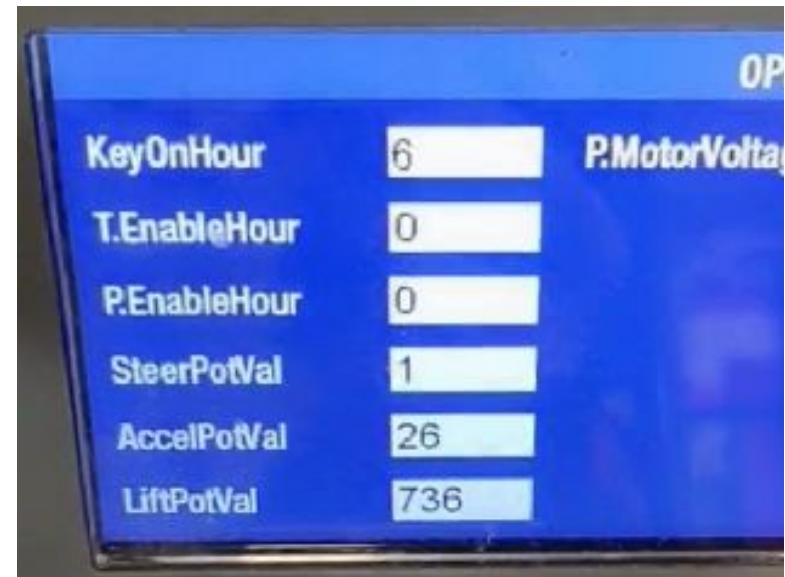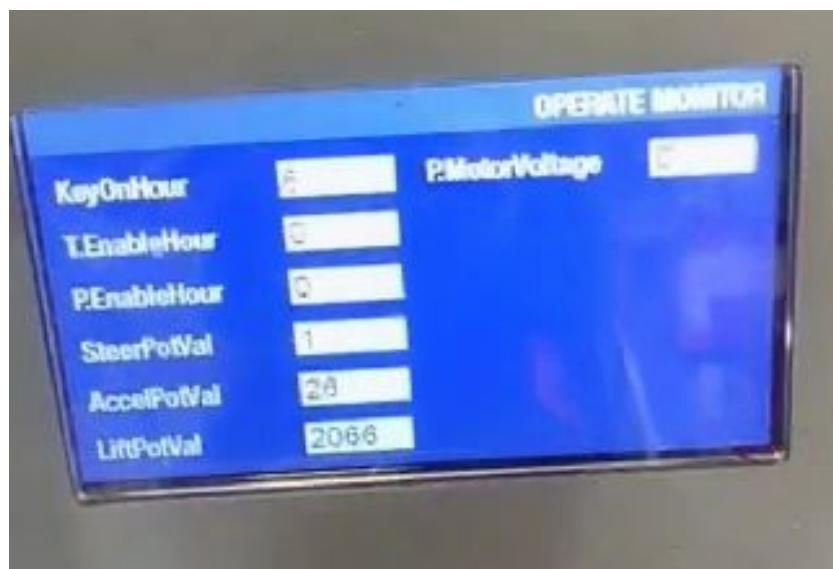

### 3 To adjust steering parameter



a Move the cursor to "8 Steer set" , click "OK" to enter.





STEER SET	
SteerLimSpeedOn	0
SteerMinLimScale	12
SteerPot.ActiveHigh	1856
SteerPot.ActiveLow	720
SteerPot.ErrorHigh	3300
SteerPot.ErrorLow	0
SteerPotNeauHigh	0
SteerPotNeauLow	0
StartReduceAngle	50
EndReduceAngle	800
SteerPotMidValue	1344

### 3 To adjust steering parameter





b Move the cursor to "SteerPotActiveHigh", click "OK" to enter. To adjust the number from 1856 to 2066. (Right turn value)

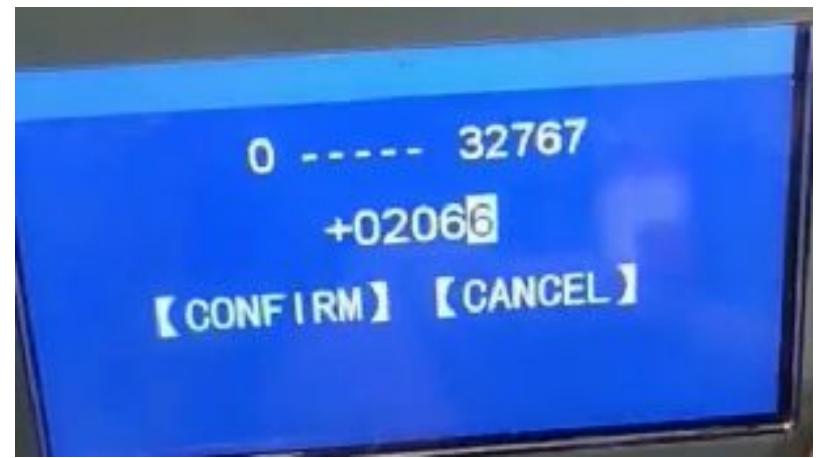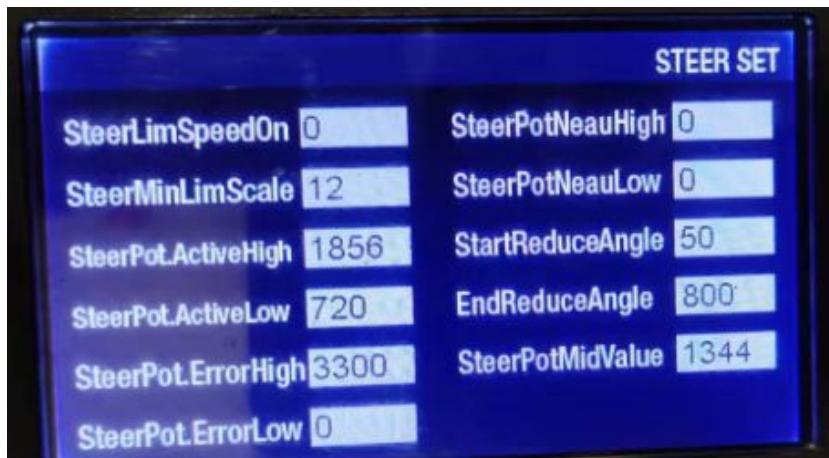

### 3 To adjust steering parameter





c Move the cursor to "SteerPotActiveLow" , click "OK" to enter. To adjust the number from 720 to 736. (Left turn value)

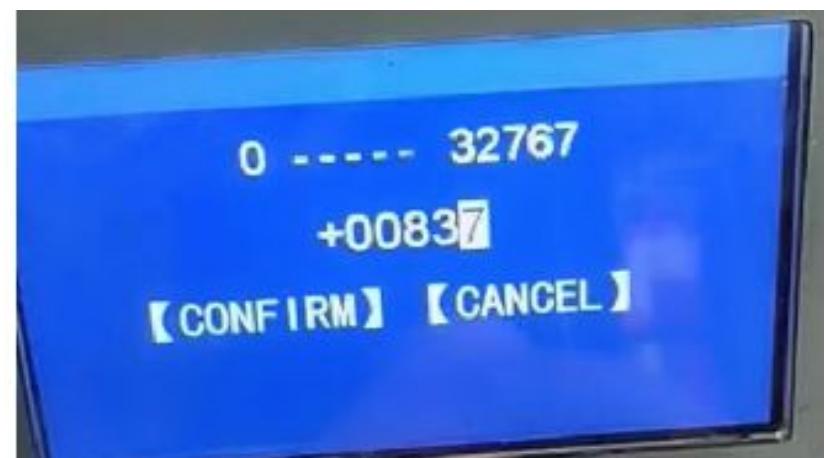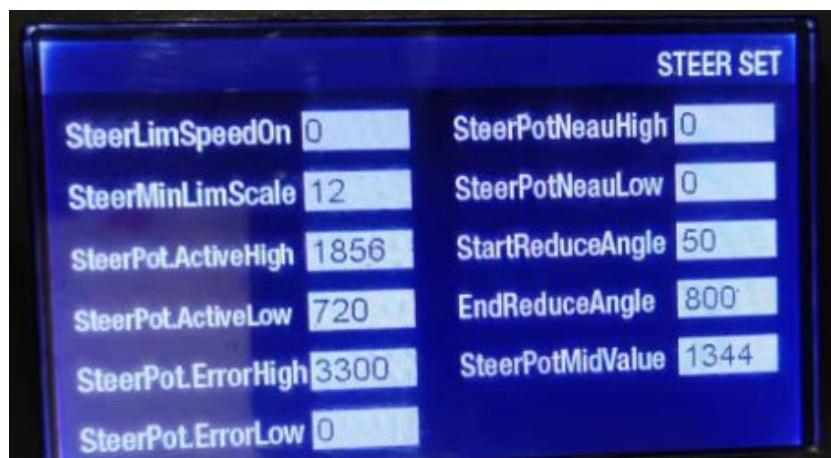

## 4 Sotre parameter



a Move the cursor to "10 Other set" , click "OK" to enter.

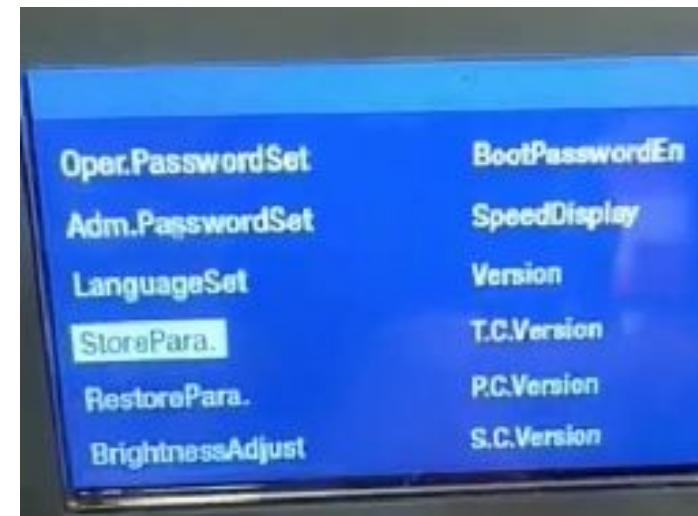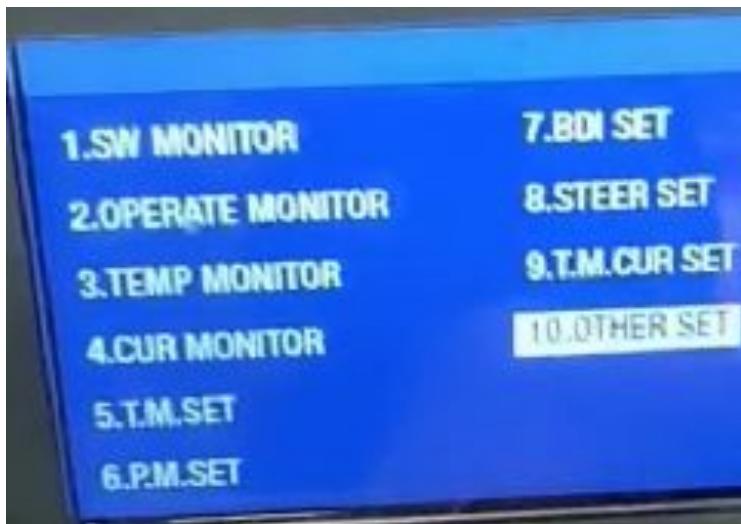

## 4 Sotre parameter



B Move the cursor to "StorePara" , click "OK" to enter. To change the number from 0 to 1, click the confirm button. Then restart the machine, done.

