

Steering parameter adjustment for three wheel electric forklift

Prepared by: Joey
Date: 2022/8/5



- 1 To input password
- 2 Streering parameter monitor
- 3 To adjust streering parameter
- 4 Sotre parameter

1 To input password




Key switch on, press the "OK" key, enter the password, the password is pressed 5 times "▽" key, press OK to enter.



2 Steering parameter monitor





a Move the cursor to "2 Operate monitor" , click "OK" to enter.

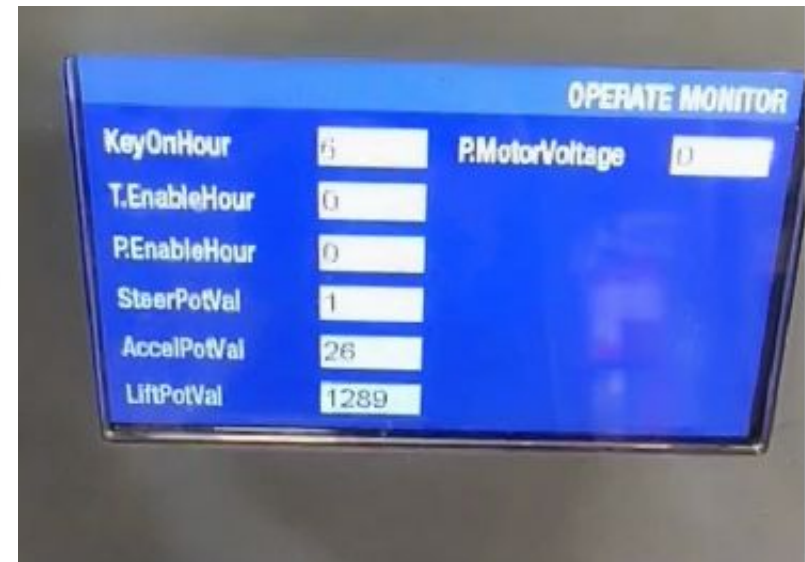

2 Steering parameter monitor




b Turn right to the end , look at the LiftPotVal change from 1289 to 2066. To record the value 2066 in right turn.

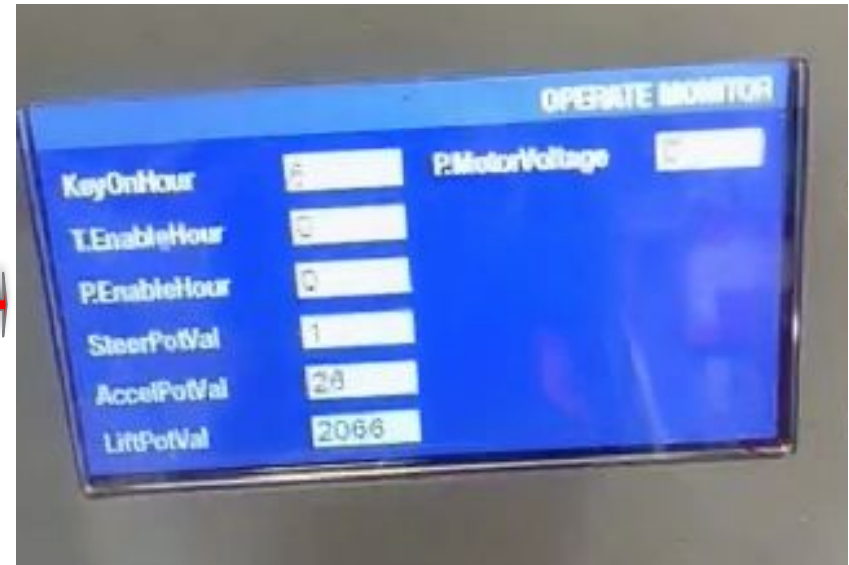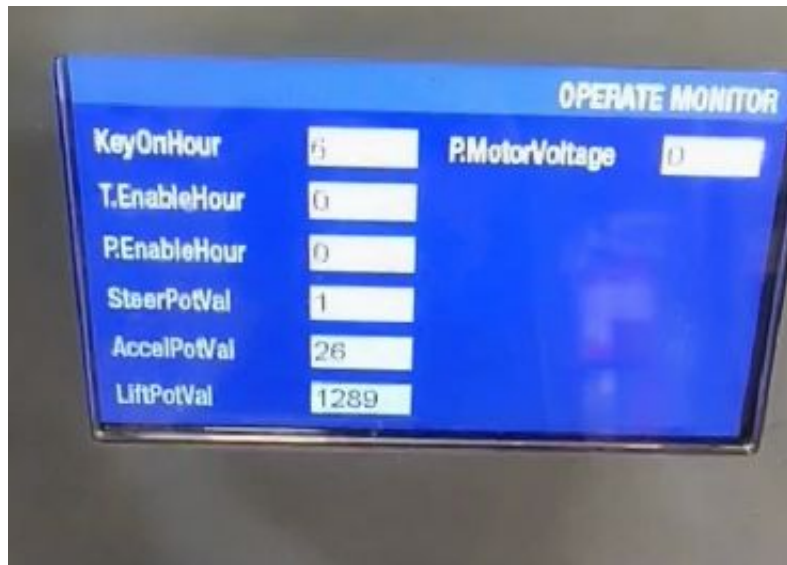

2 Steering parameter monitor




c Turn left to the end, look at the LiftPotVal change from 2066 to 736. To record the value 736 in left turn.

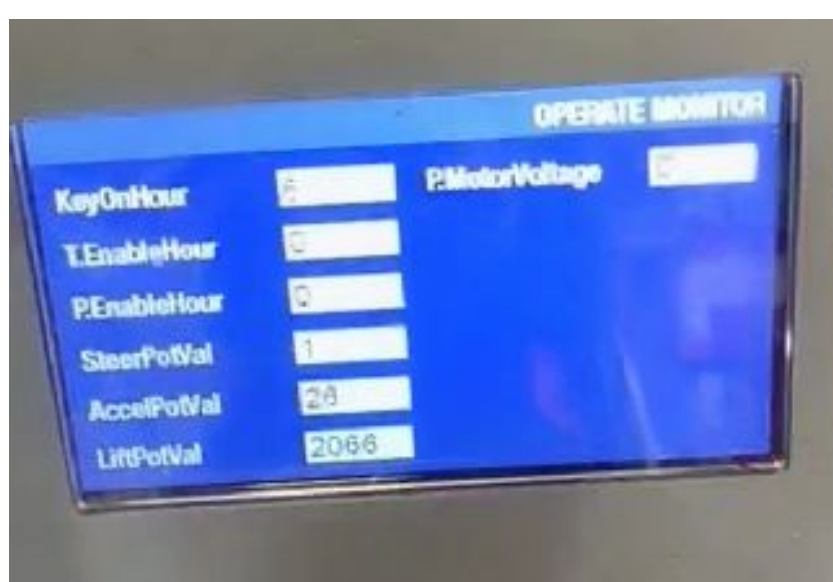

3 To adjust steering parameter





a Move the cursor to "8 Steer set" ,click "OK" to enter.

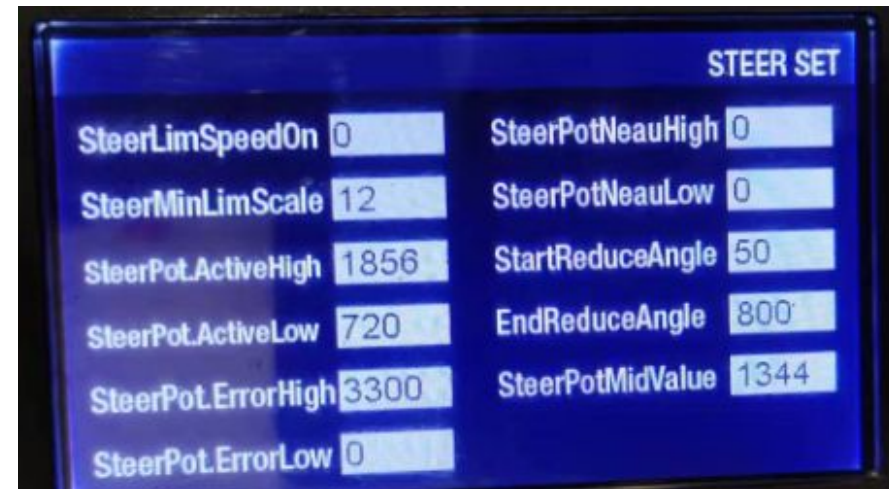

3 To adjust steering parameter





b Move the cursor to "SteerPotActiveHigh", click "OK" to enter. To adjust the number from 1856 to 2066. (Right turn value)

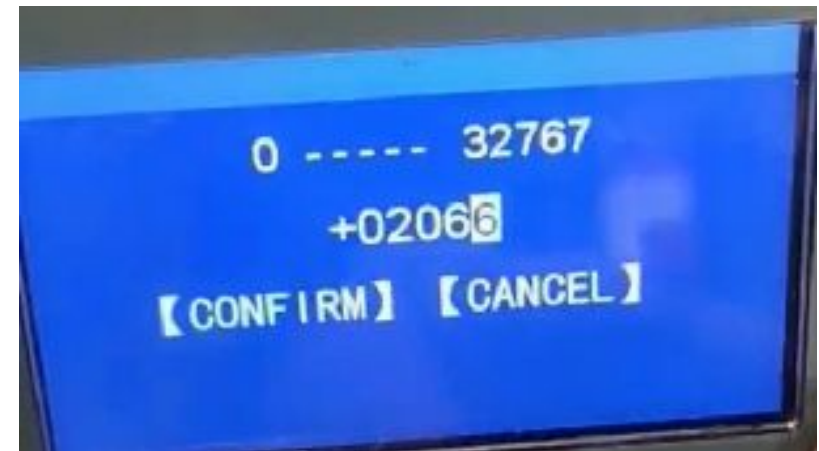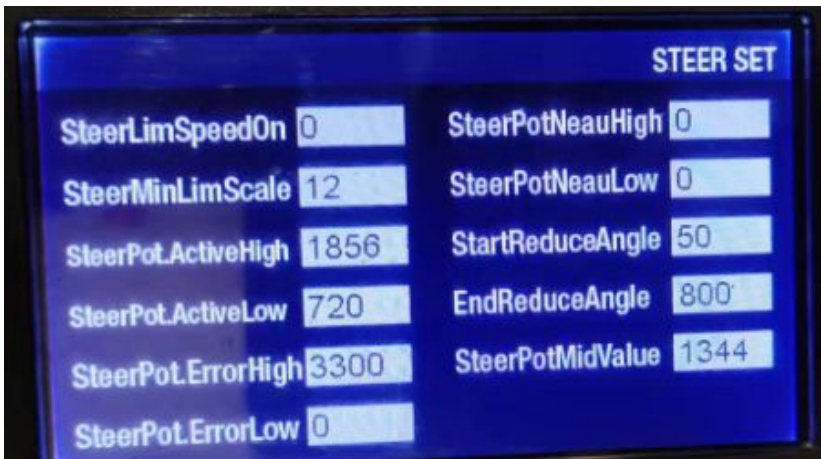

3 To adjust steering parameter




c Move the cursor to "SteerPotActiveLow", click "OK" to enter. To adjust the number from 720 to 736. (Left turn value)

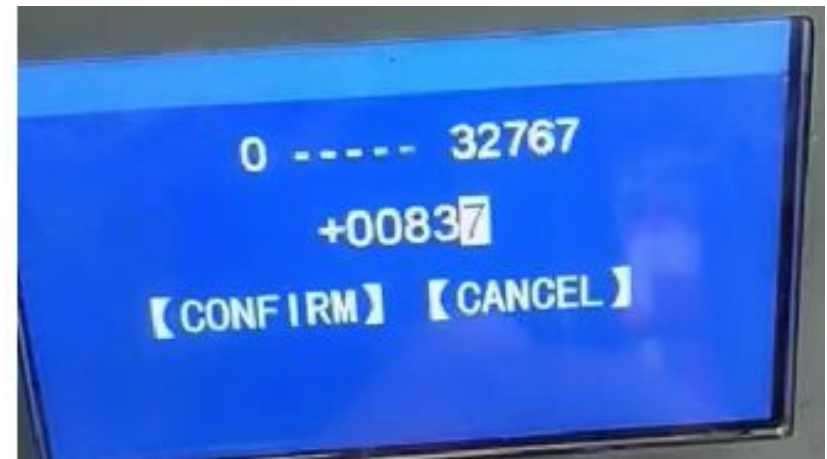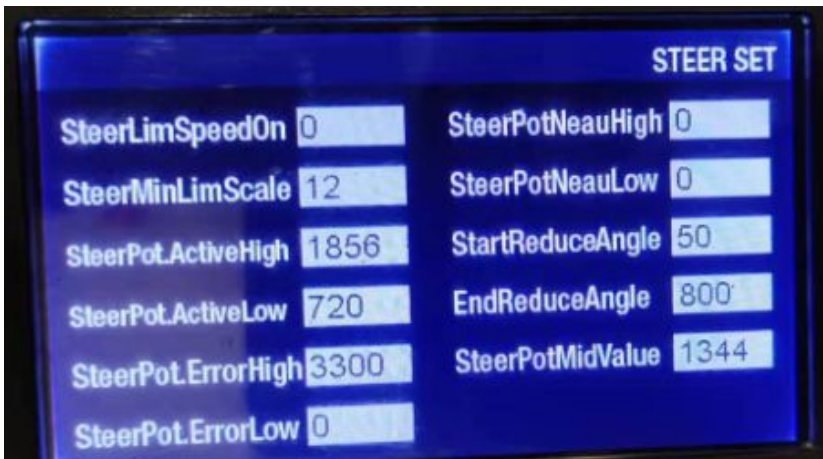

4 Sotre parameter



a Move the cursor to "10 Other set" ,click "OK" to enter.

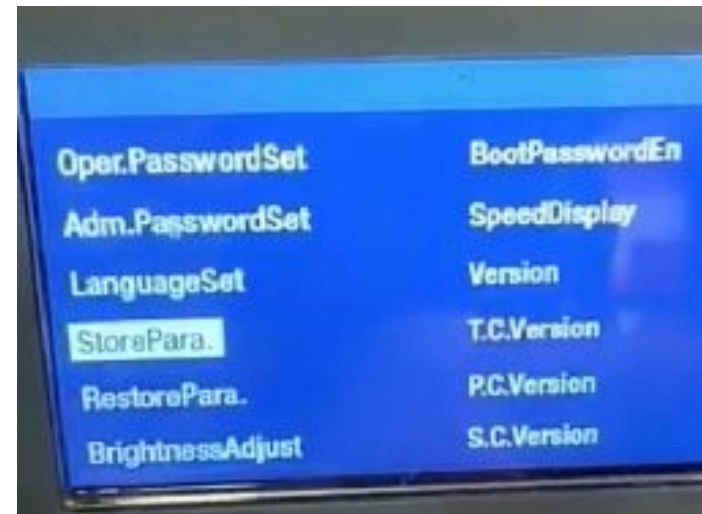

4 Sotre parameter



B Move the cursor to "StorePara", click "OK" to enter. To change the number from 0 to 1, click the confirm button. Then restart the machine, done.

