Operators panel

Menu handling

Atlas Copco

* *

Operators panel

Access levels

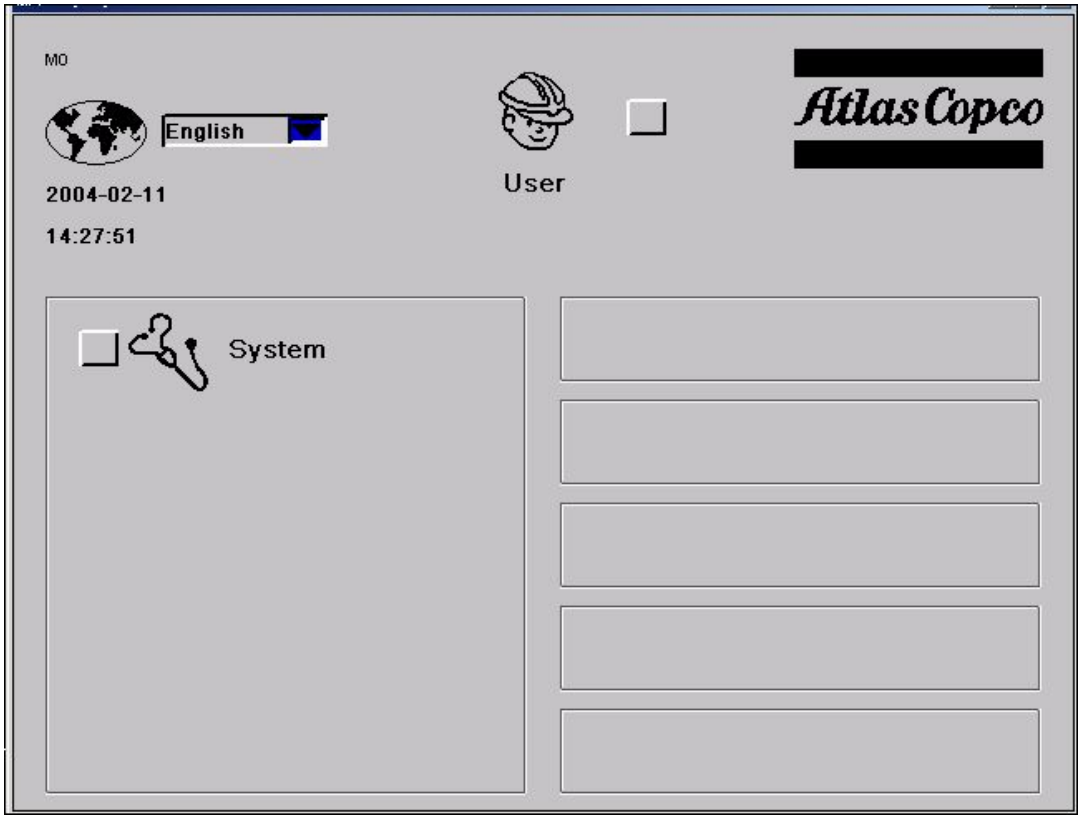

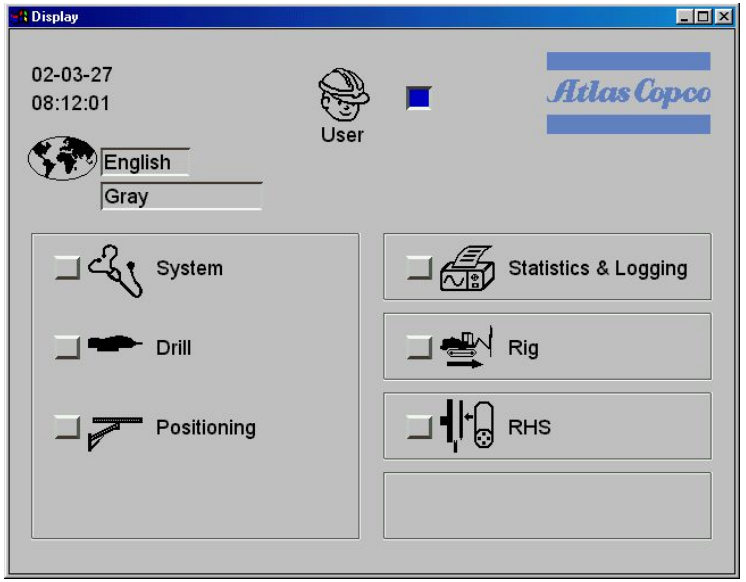

Operators panel

Operators level

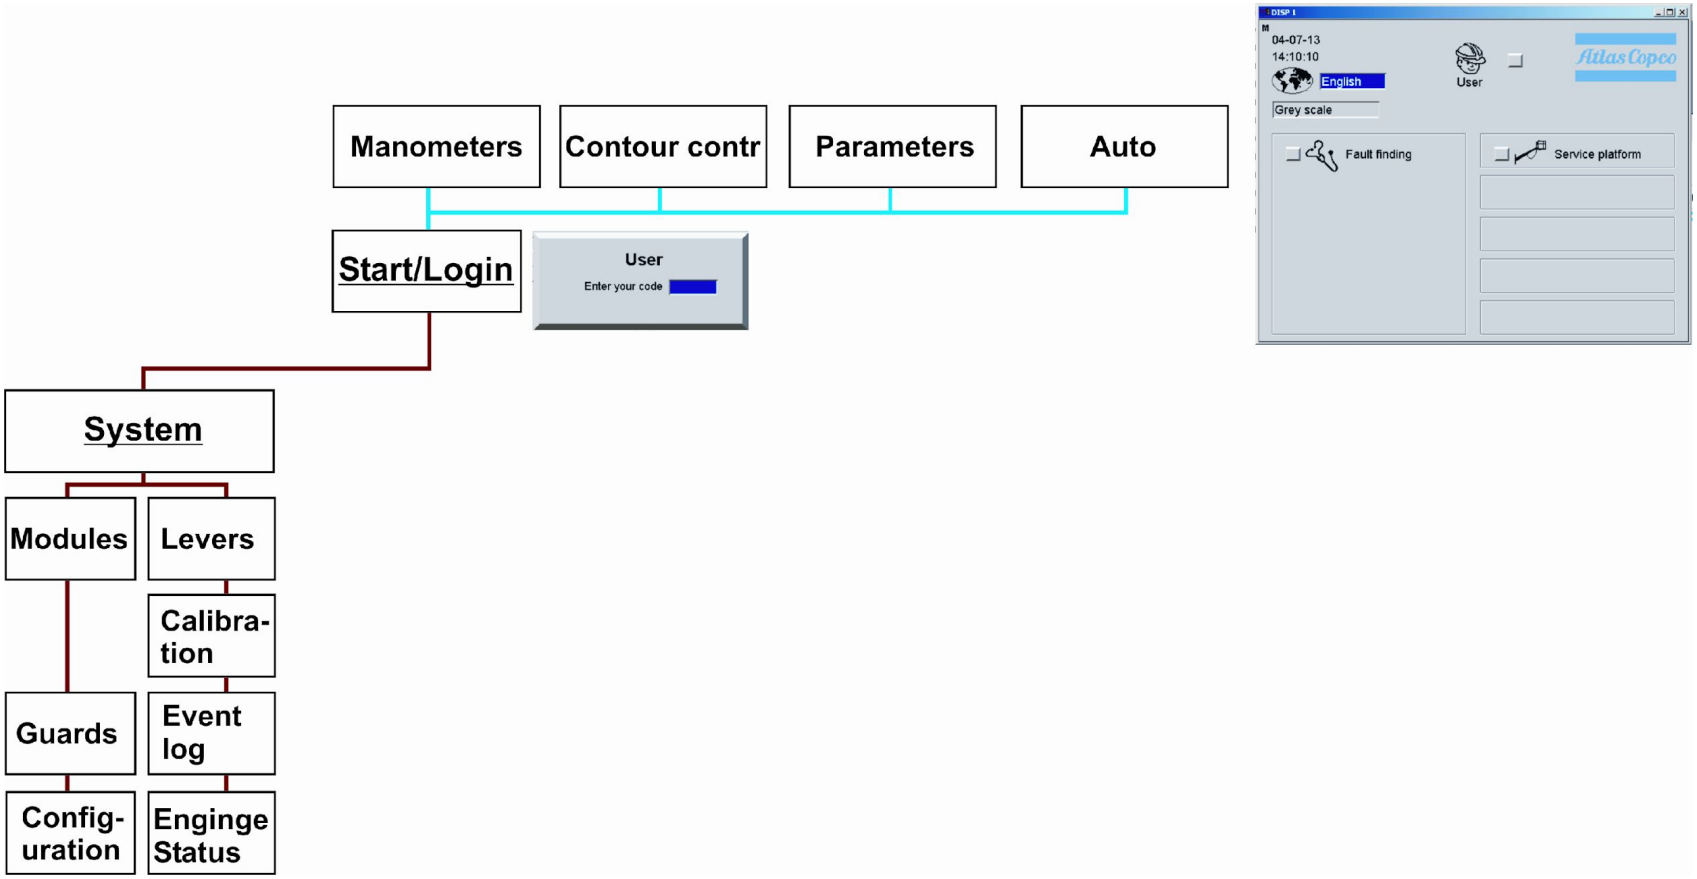

Operators panel

Service contract level

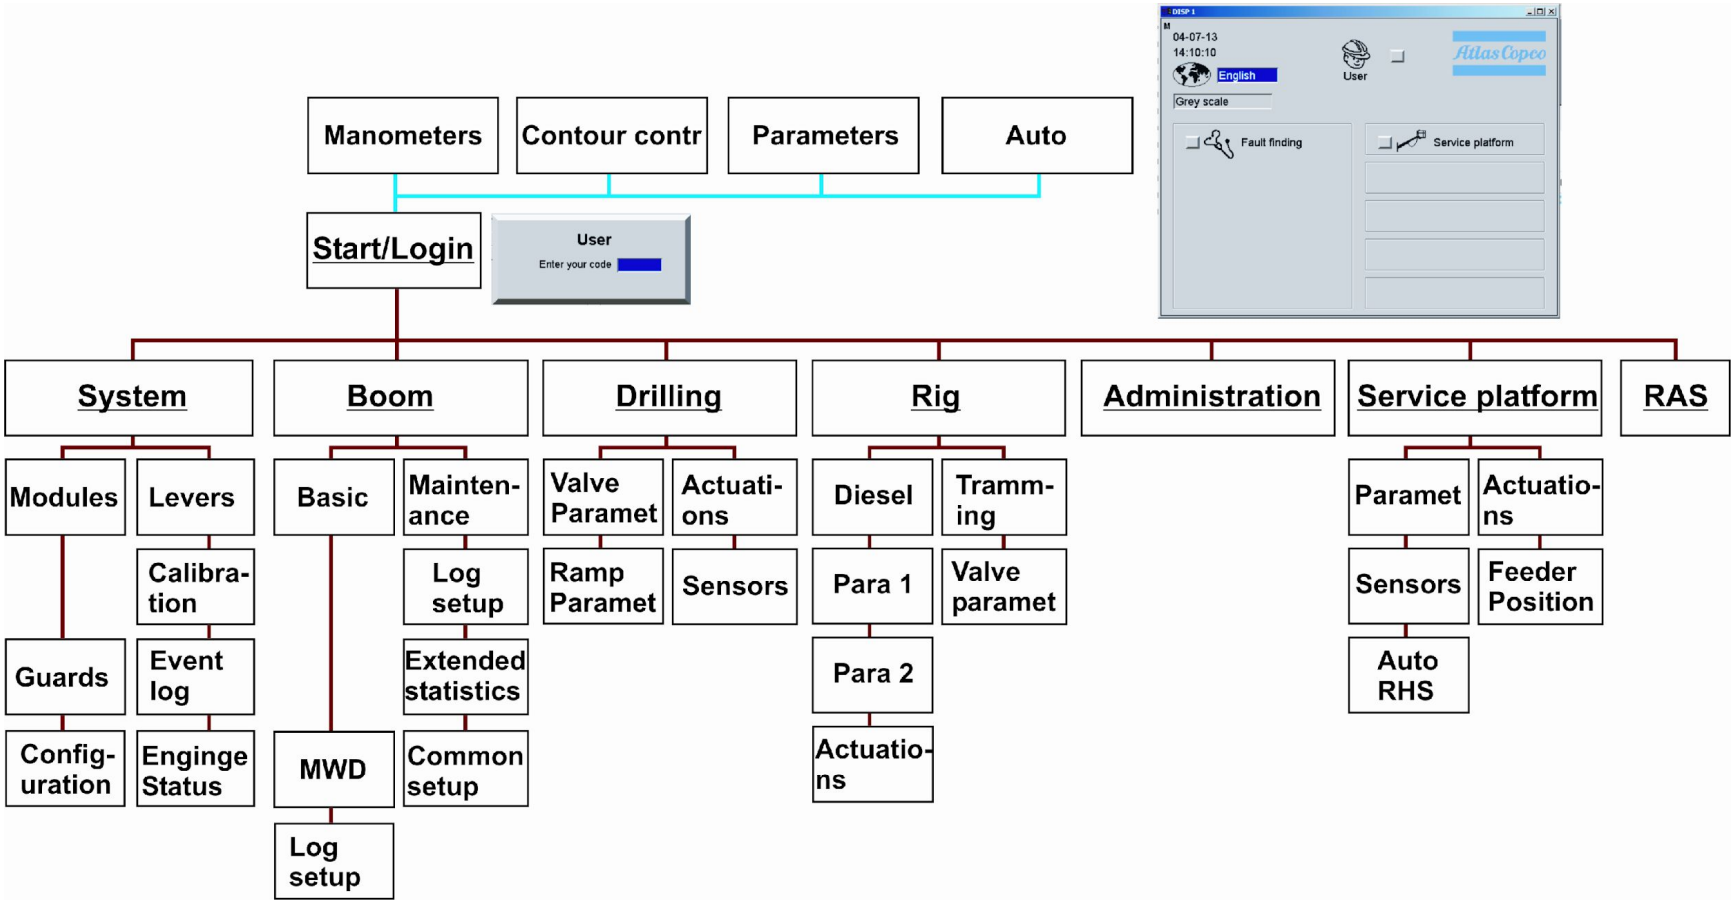

Operators panel

Atlas Copco Level

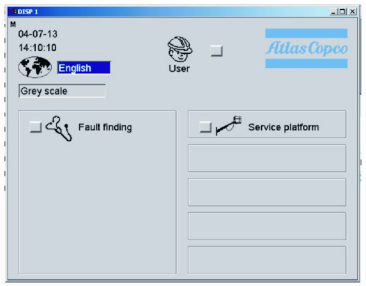

- Manometers
- Contour contr
- Parameters
- Auto
- Start/Login
  - User: Enter your code
- System
  - Modules
    - Guards
    - Config-uration
  - Levers
    - Calibra-tion
    - Event log
    - Enginge Status
- Boom
  - Basic
    - MWD
      - Log setup
  - Mainten-ance
    - Log setup
    - Extended statistics
    - Common setup
- Drilling
  - Valve Paramet
    - Ramp Paramet
  - Actuati-ons
    - Sensors
- Rig
  - Diesel
    - Para 1
    - Para 2
    - Sensors
    - Actuatio-ns
  - Tramm-ing
    - Valve paramet
    - Actuatio-ns
    - Lever Paramet
    - Ramp Paramet
    - Winch
    - Paramet
    - Actuatio-ns
- Administration
  - Paramet
    - Perc Pres
    - Time 1
    - Feed Pres
    - Feed Spd
    - Rota
    - Time 2
    - Rota Pres
    - Damp Pres
    - Misc
  - Actuati-ons
    - Sensors
    - DCT
      - Paramet
      - Actuati-ons
- Service platform
  - Paramet
    - Sensors
    - Auto RHS
  - Actuatio-ns
    - Feeder Position
- RAS

Operators panel

Navigation buttons

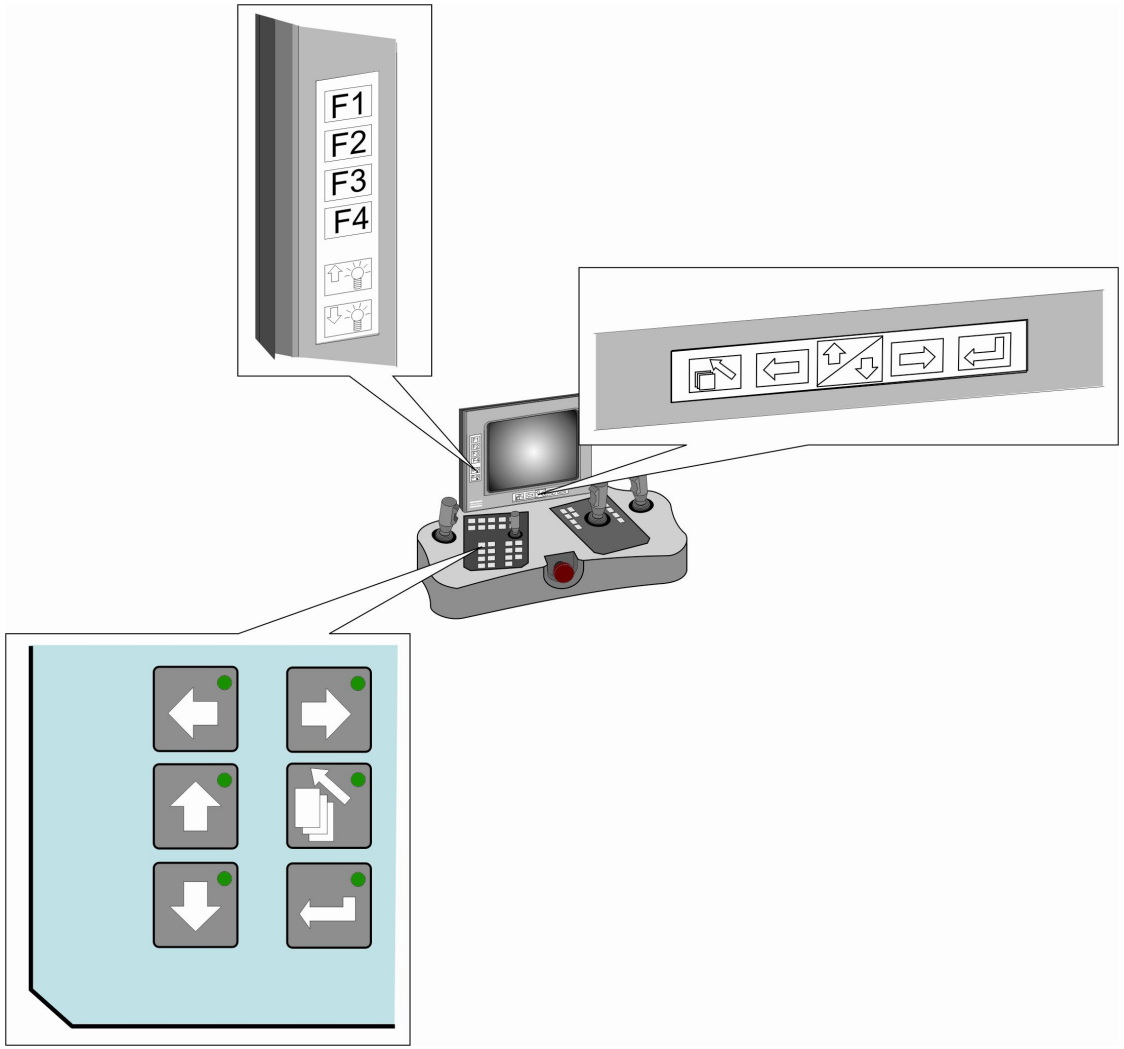

Operators panel

Menu modules

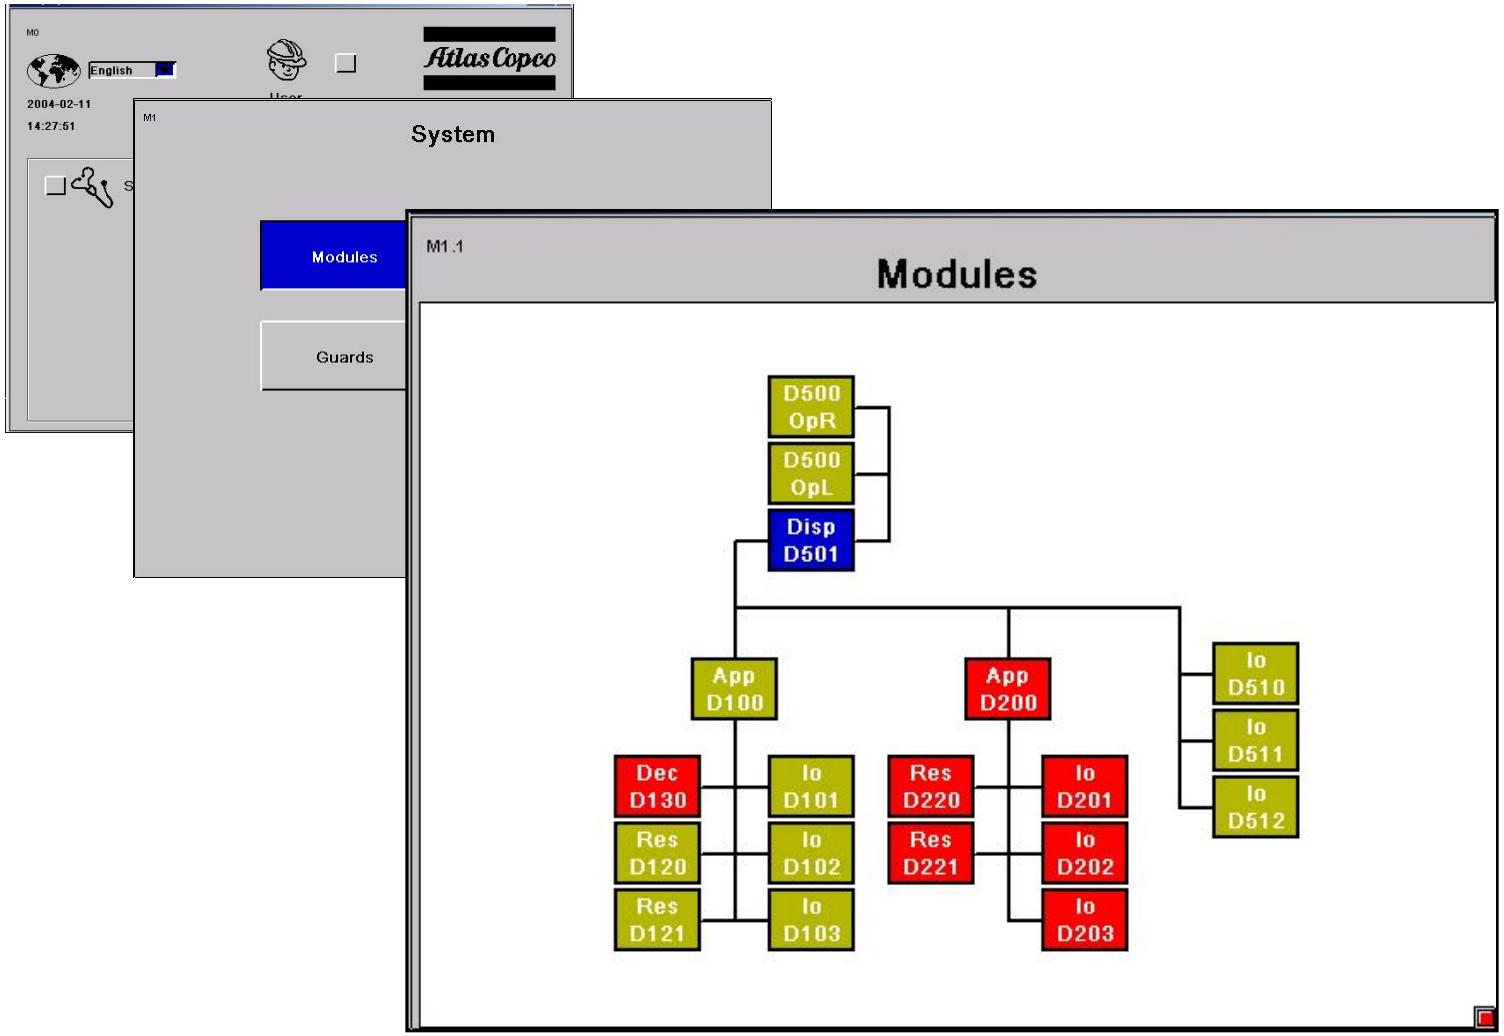

Operators panel

Menu modules

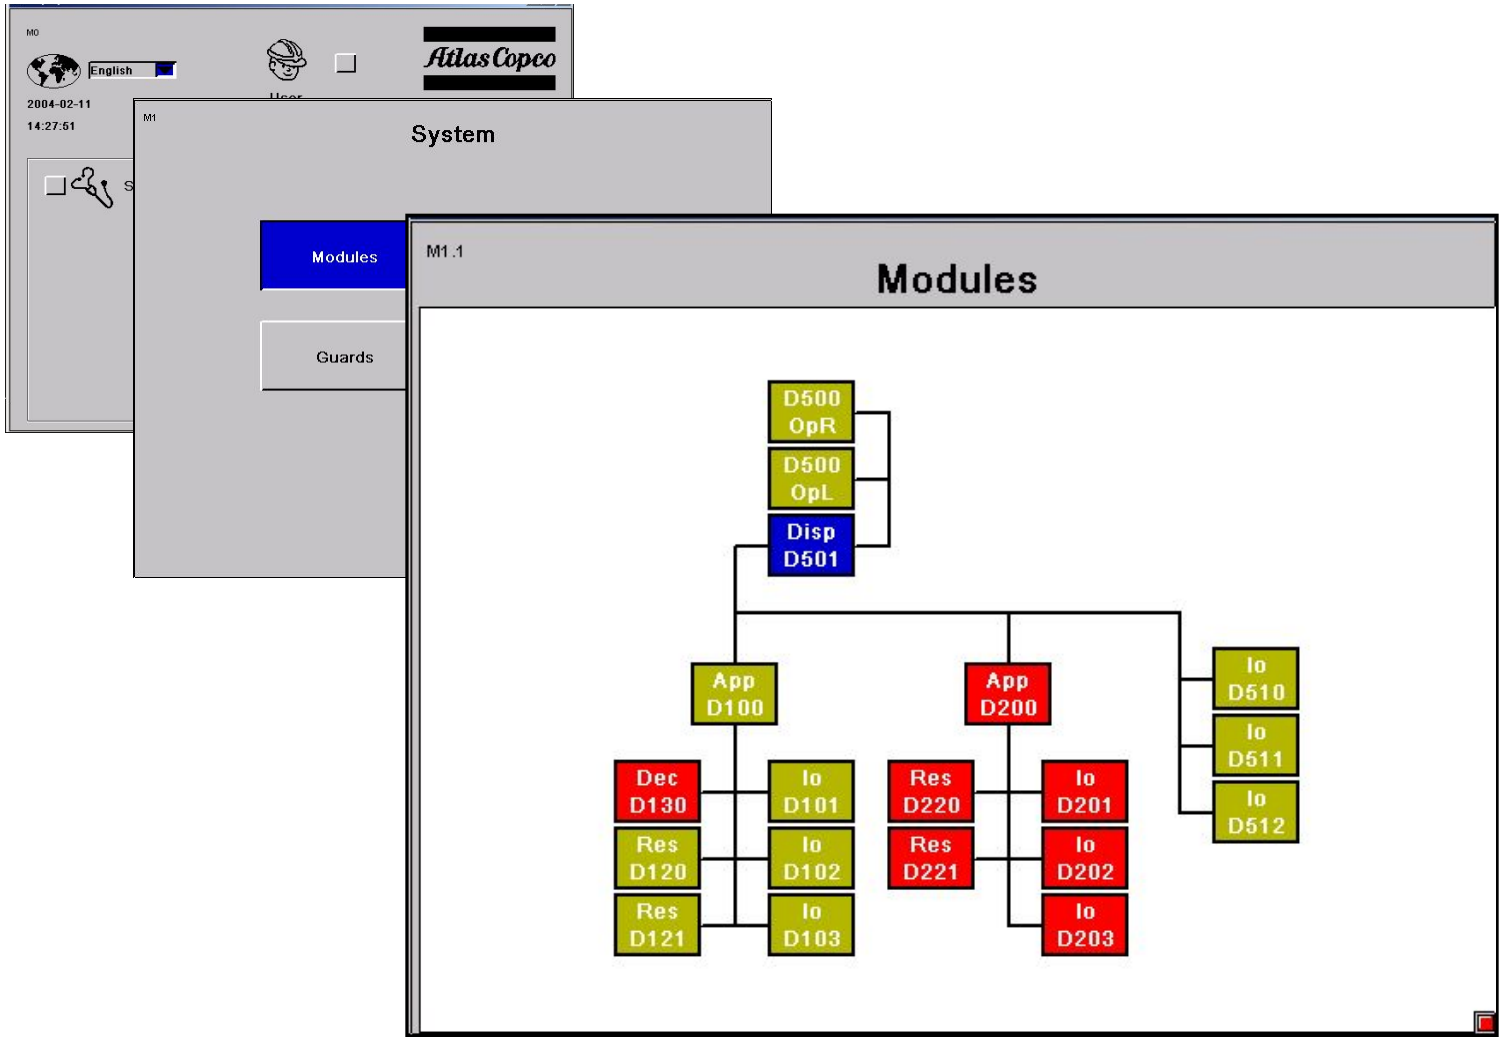

Operators panel

Menu modules – I/O

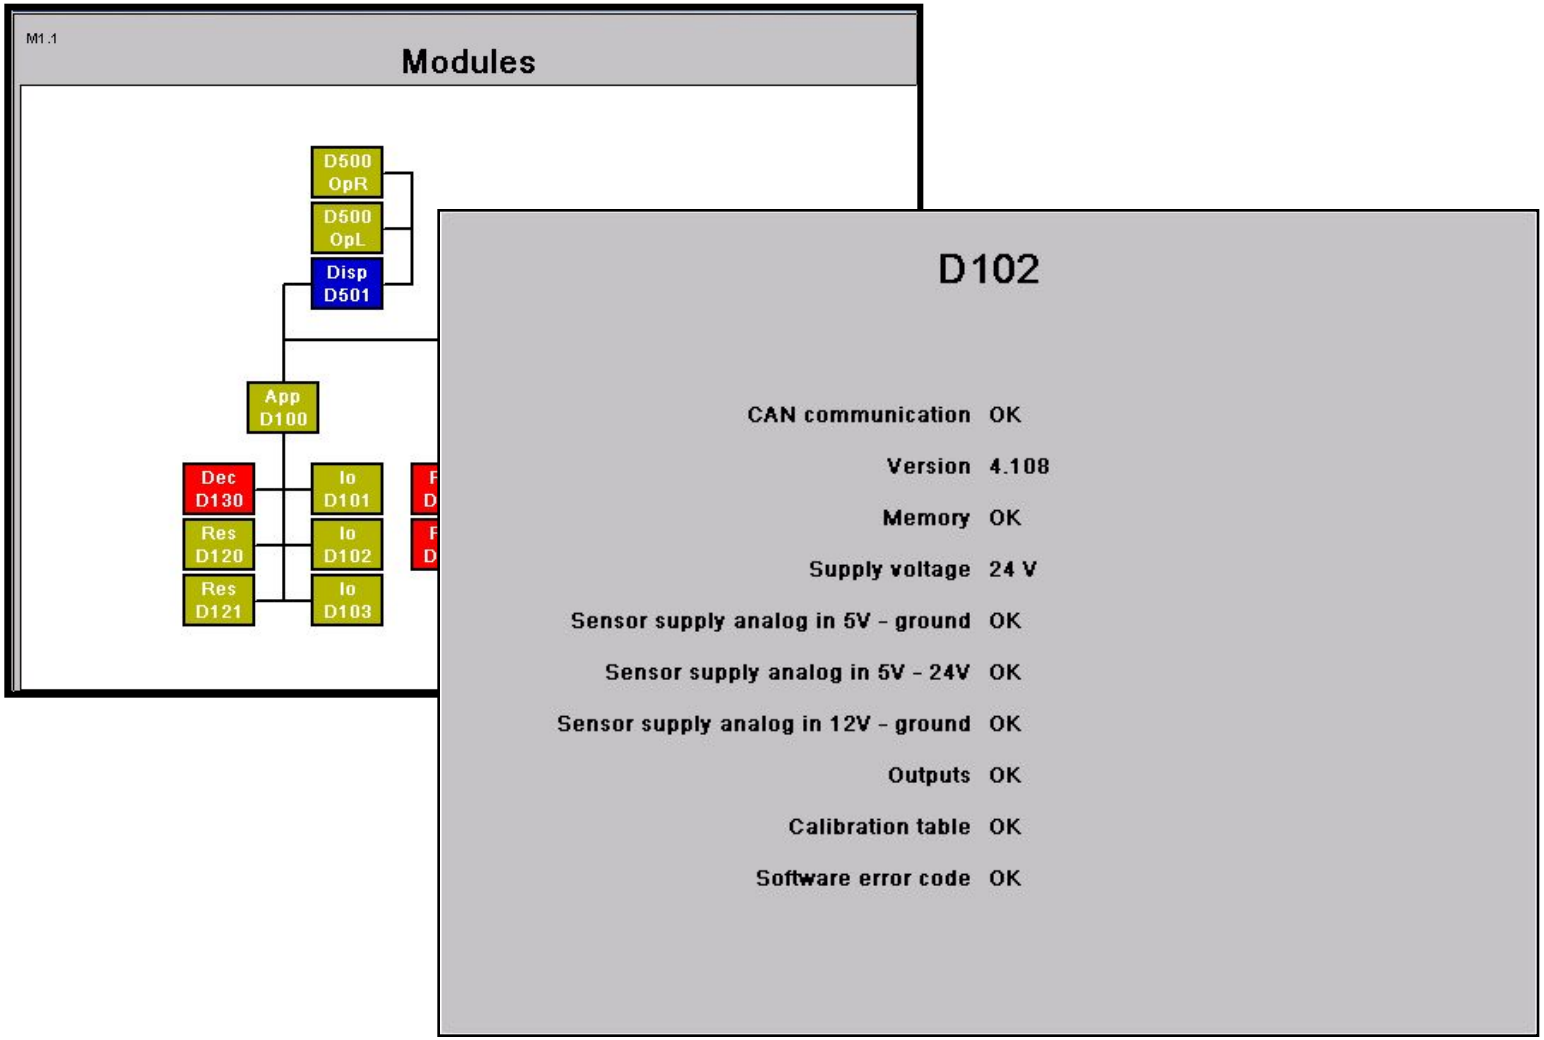

Operators panel

Menu administration

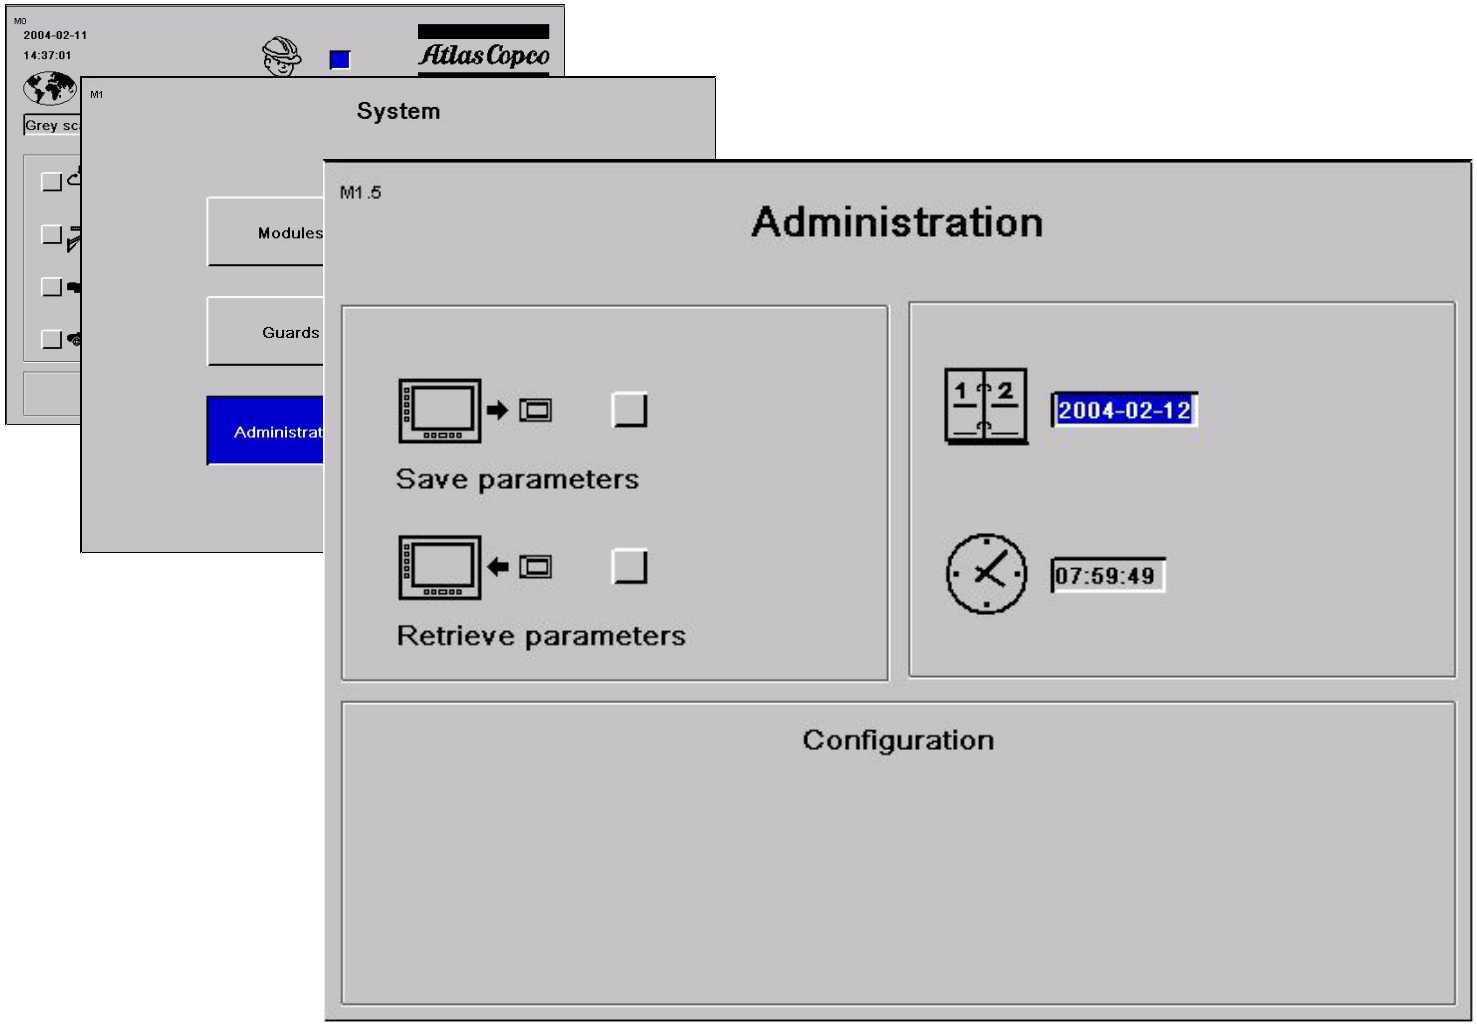

We are committed to your superior productivity through interaction and innovation.

Atlas Copco