


ПРОЕКТИРОВАНИЕ БОТИНОК С НАСТРОЧНЫМИ БЕРЦАМИ




Проектирование КОВ

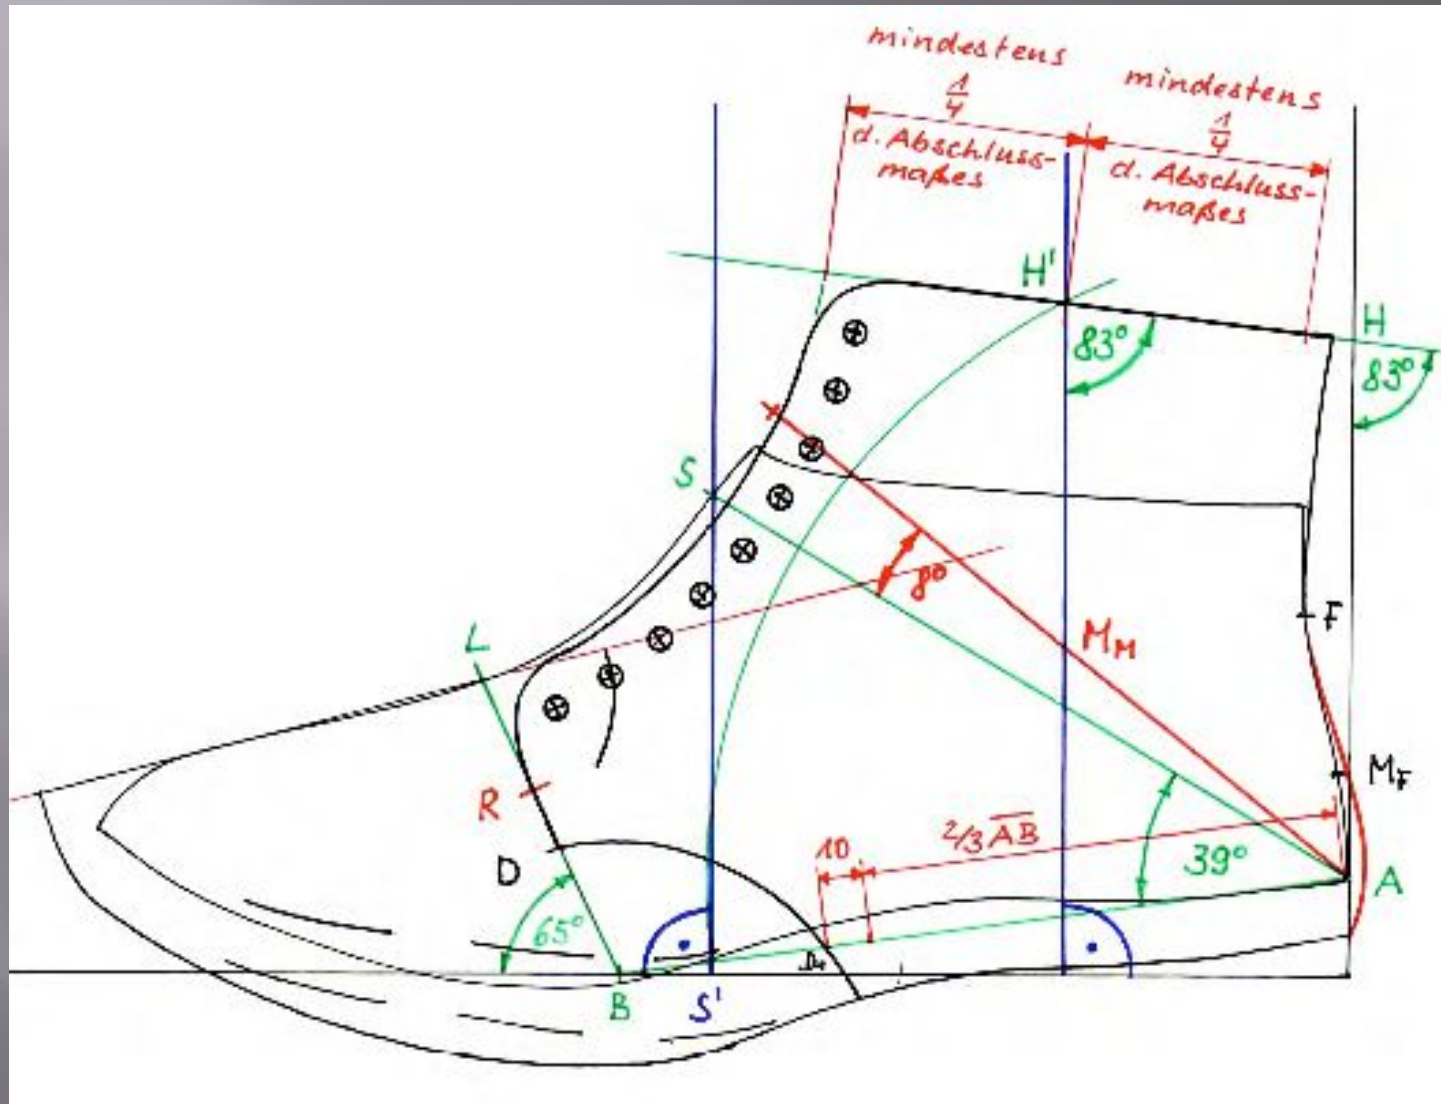



Длина верхнего канта ботинок

Высота голенища, см	10	11	12	13	14	15	16	17
Длина линии верхнего канта для указанных размеров, мм								
36	205	210	213	216	220	-	-	-
37	210	215	218	221	225	-	-	-
38	215	220	223	226	230	233	236	240
39	220	225	228	231	235	238	241	245
40	225	230	233	236	240	243	246	250
41	-	235	238	241	245	248	251	255
42	-	240	243	246	250	253	256	260
43	-	245	248	251	255	258	261	265
44	-	250	253	256	260	263	266	270
45	-	255	258	261	265	268	271	275
46	-	260	263	266	270	273	276	280
47	-	265	268	271	275	278	281	285


Проектирование КОВ

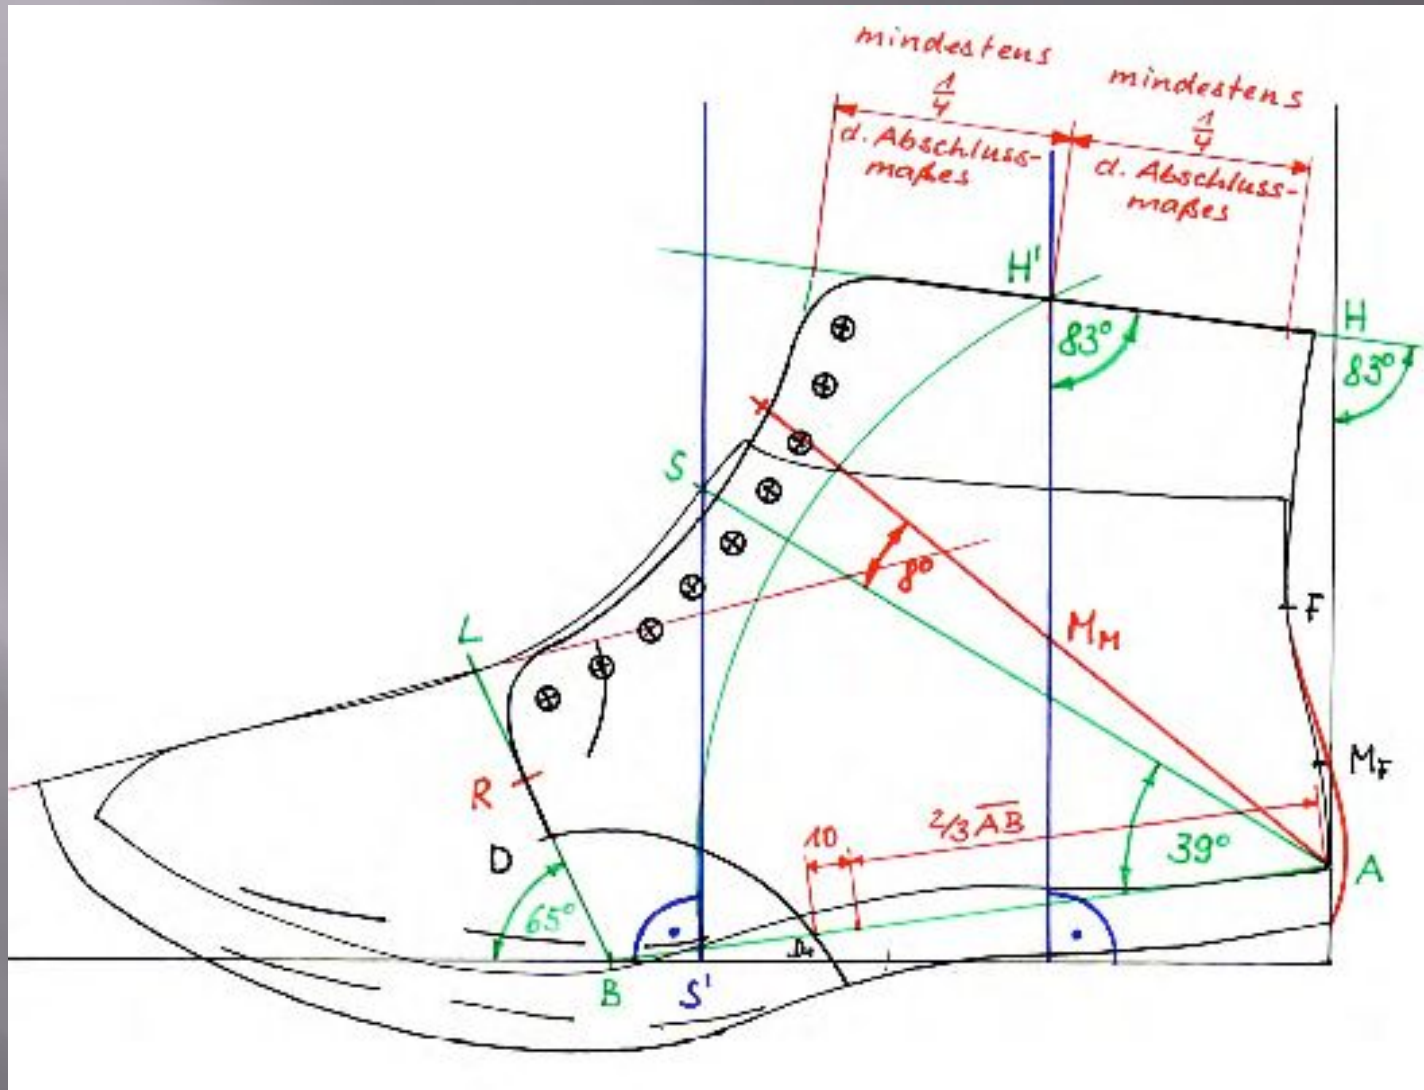


Наружные детали верха

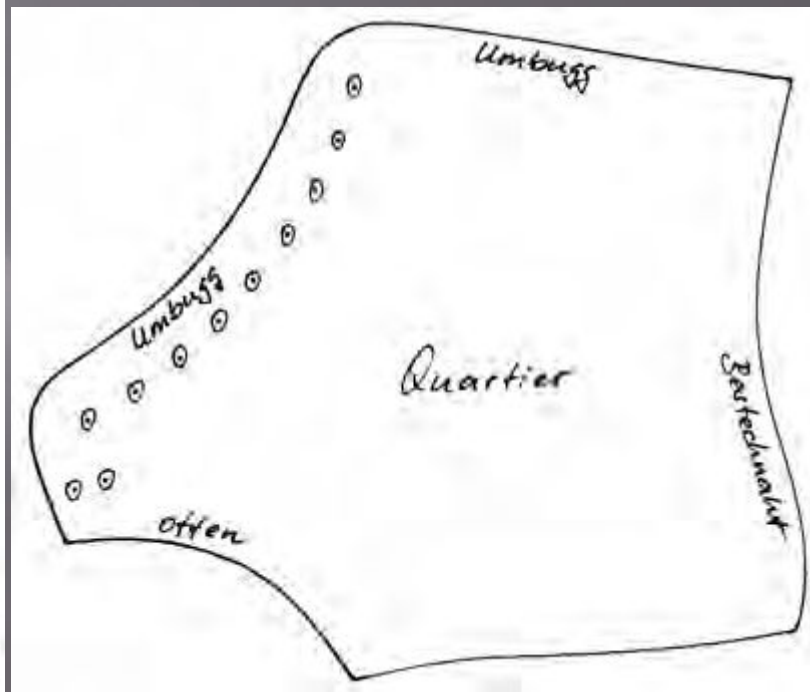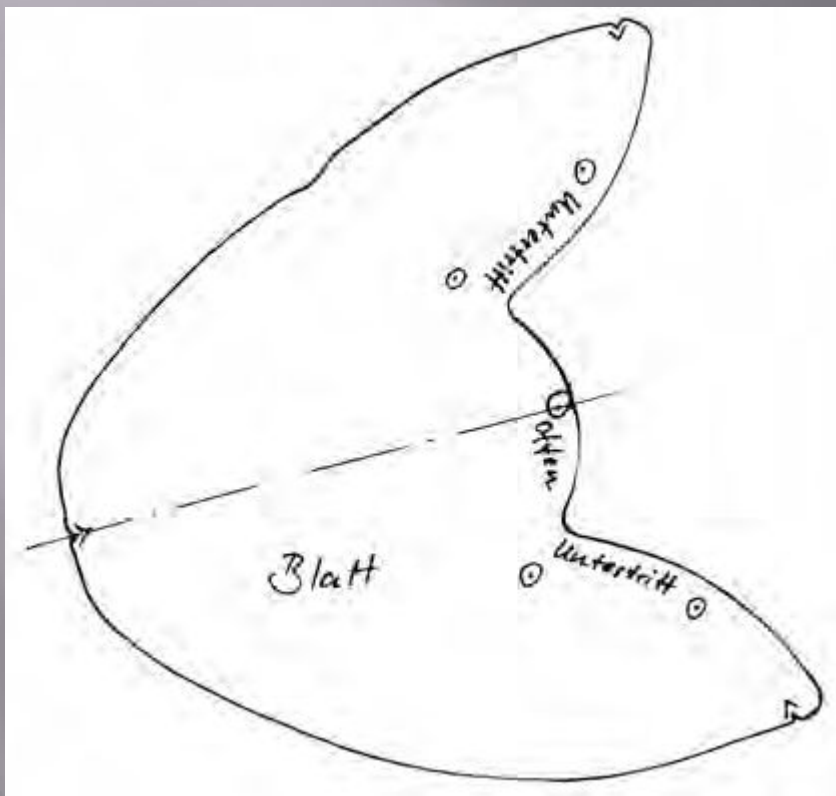


Проектирование КОВ

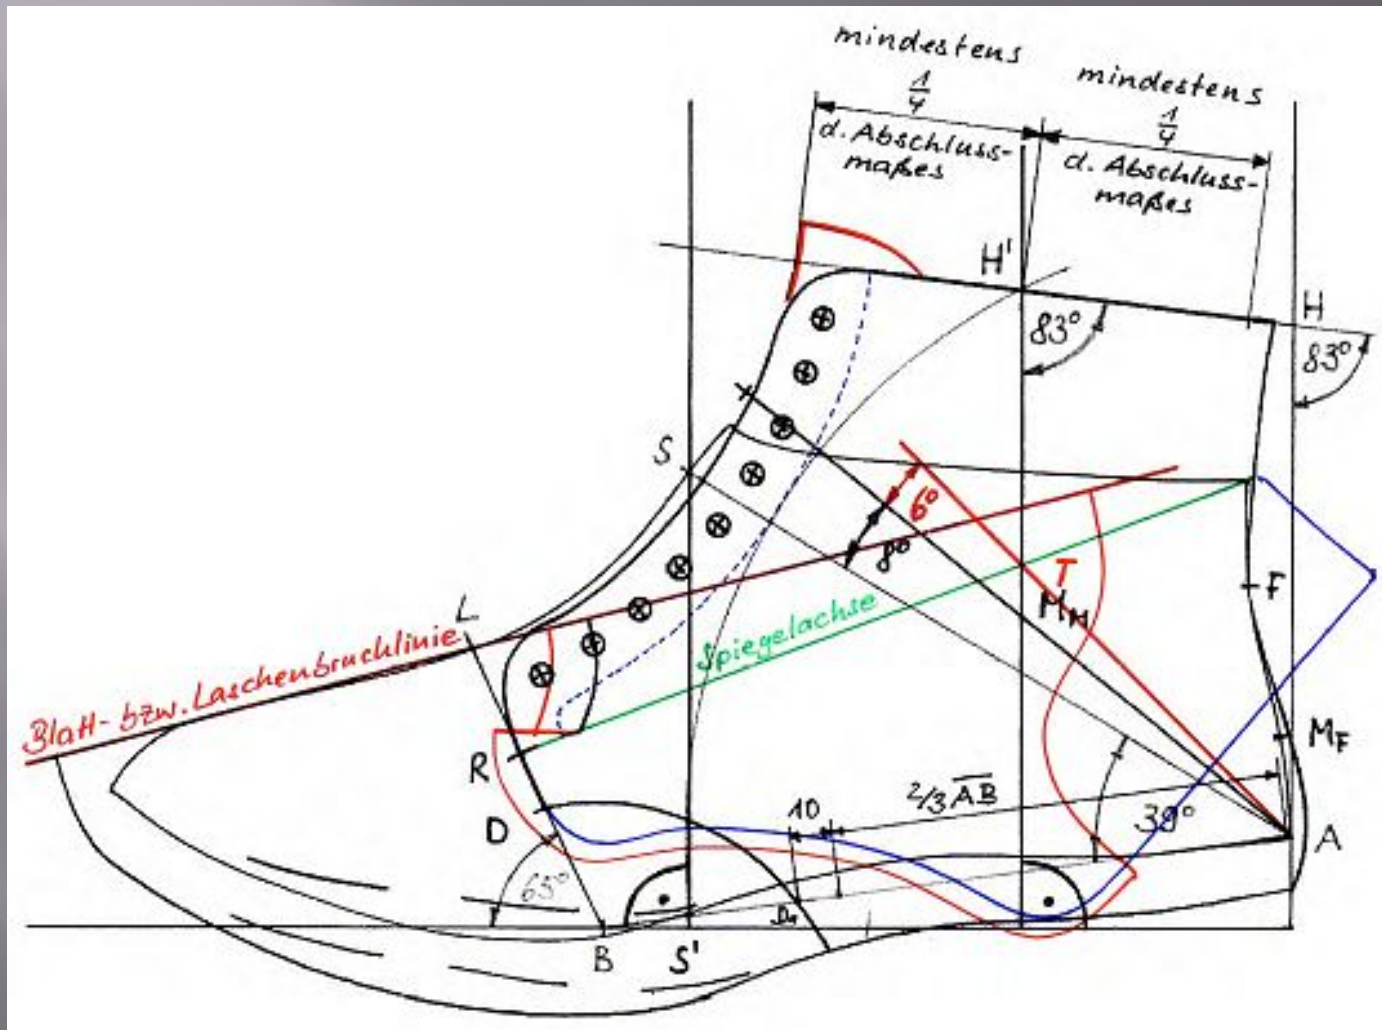

Варианты построения язычка

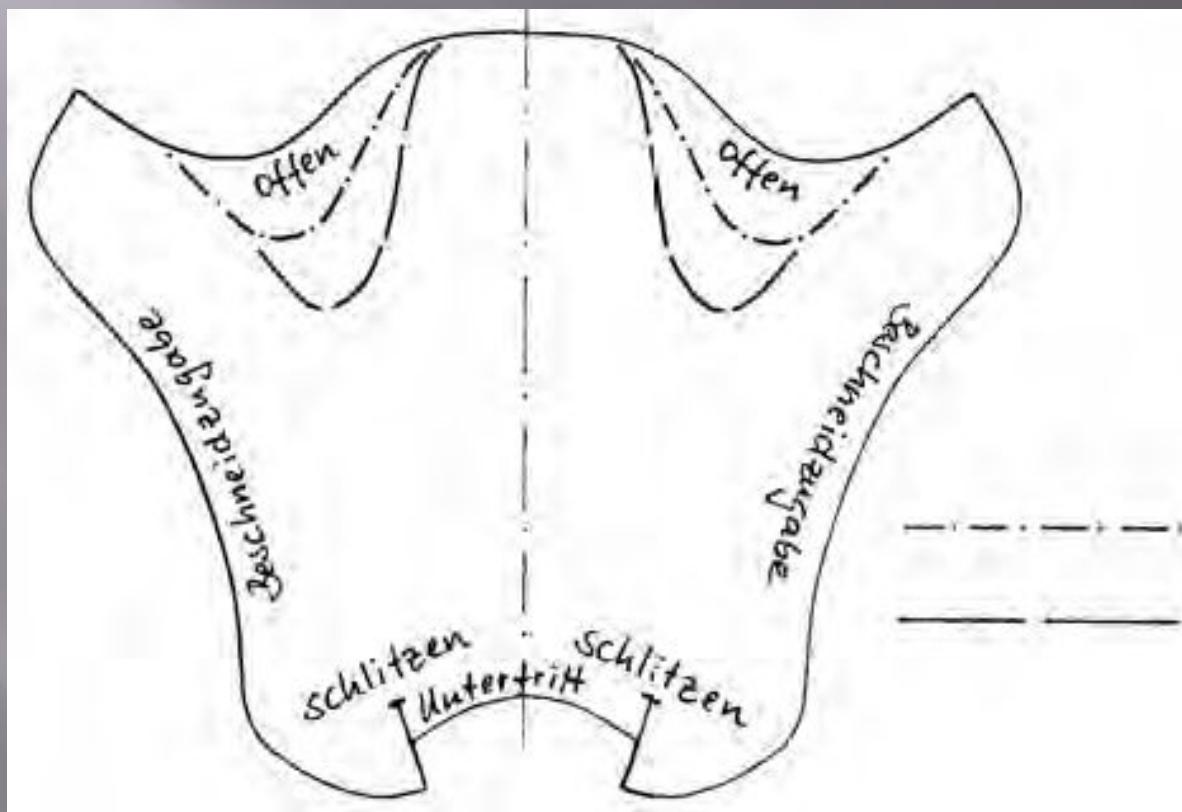

Проектирование подкладки

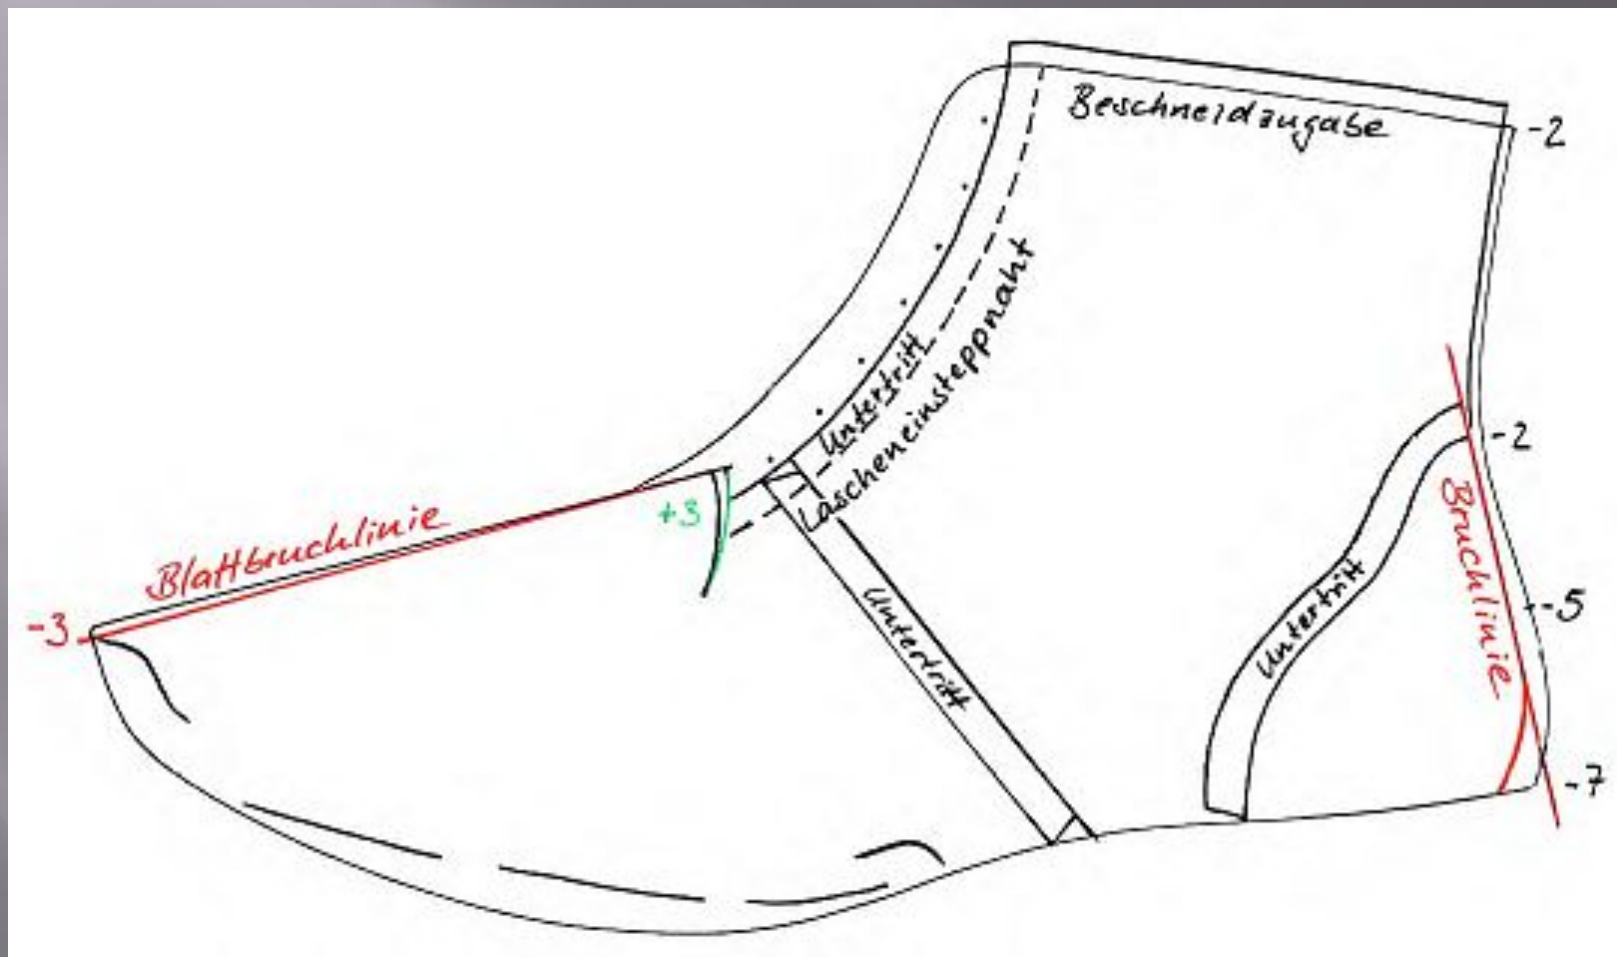

Детали подкладки

